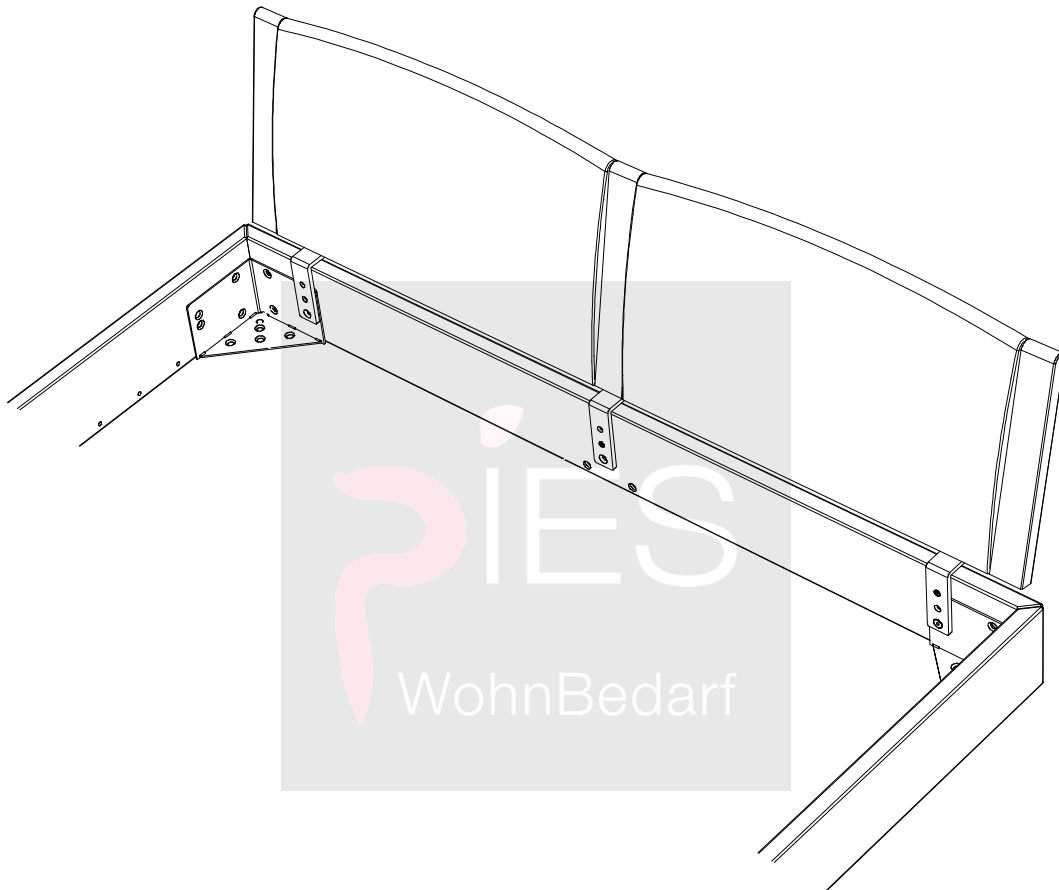
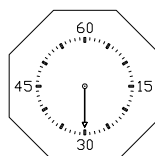
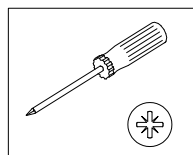


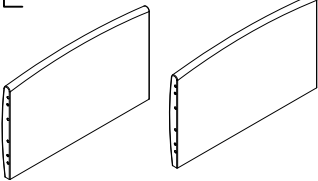
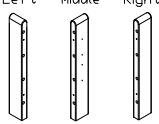











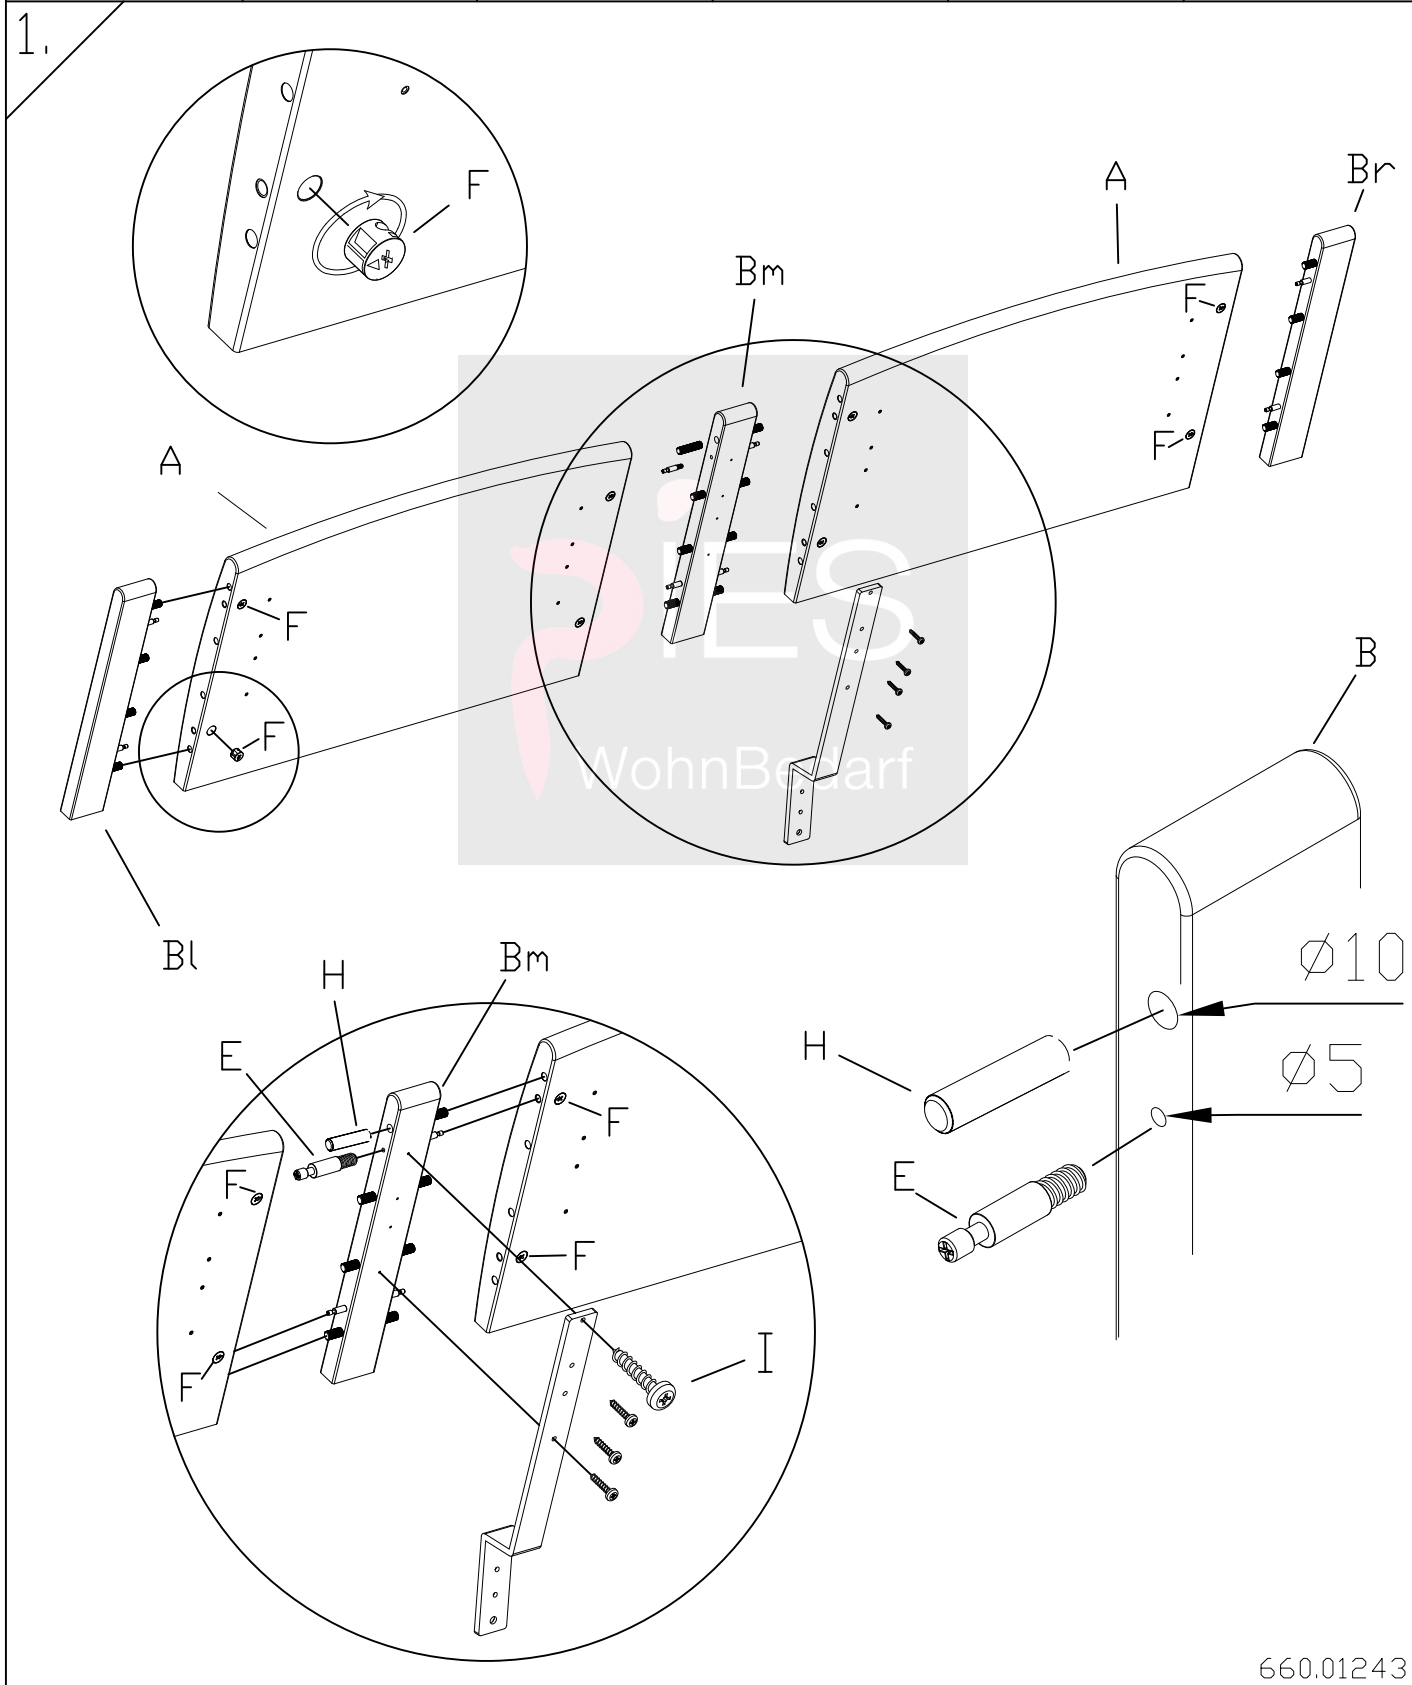
MONTAGEANLEITUNG  
NOTICE DE MONTAGE  
ASSEMBLY INSTRUCTION  
ISTRUZIONE DI MONTAGGIO

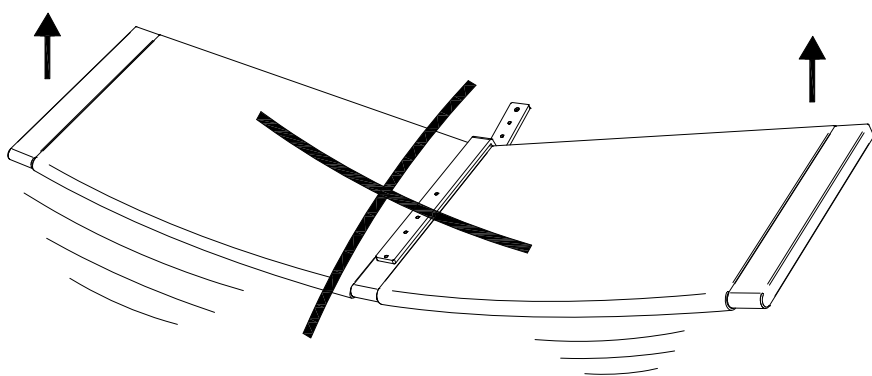
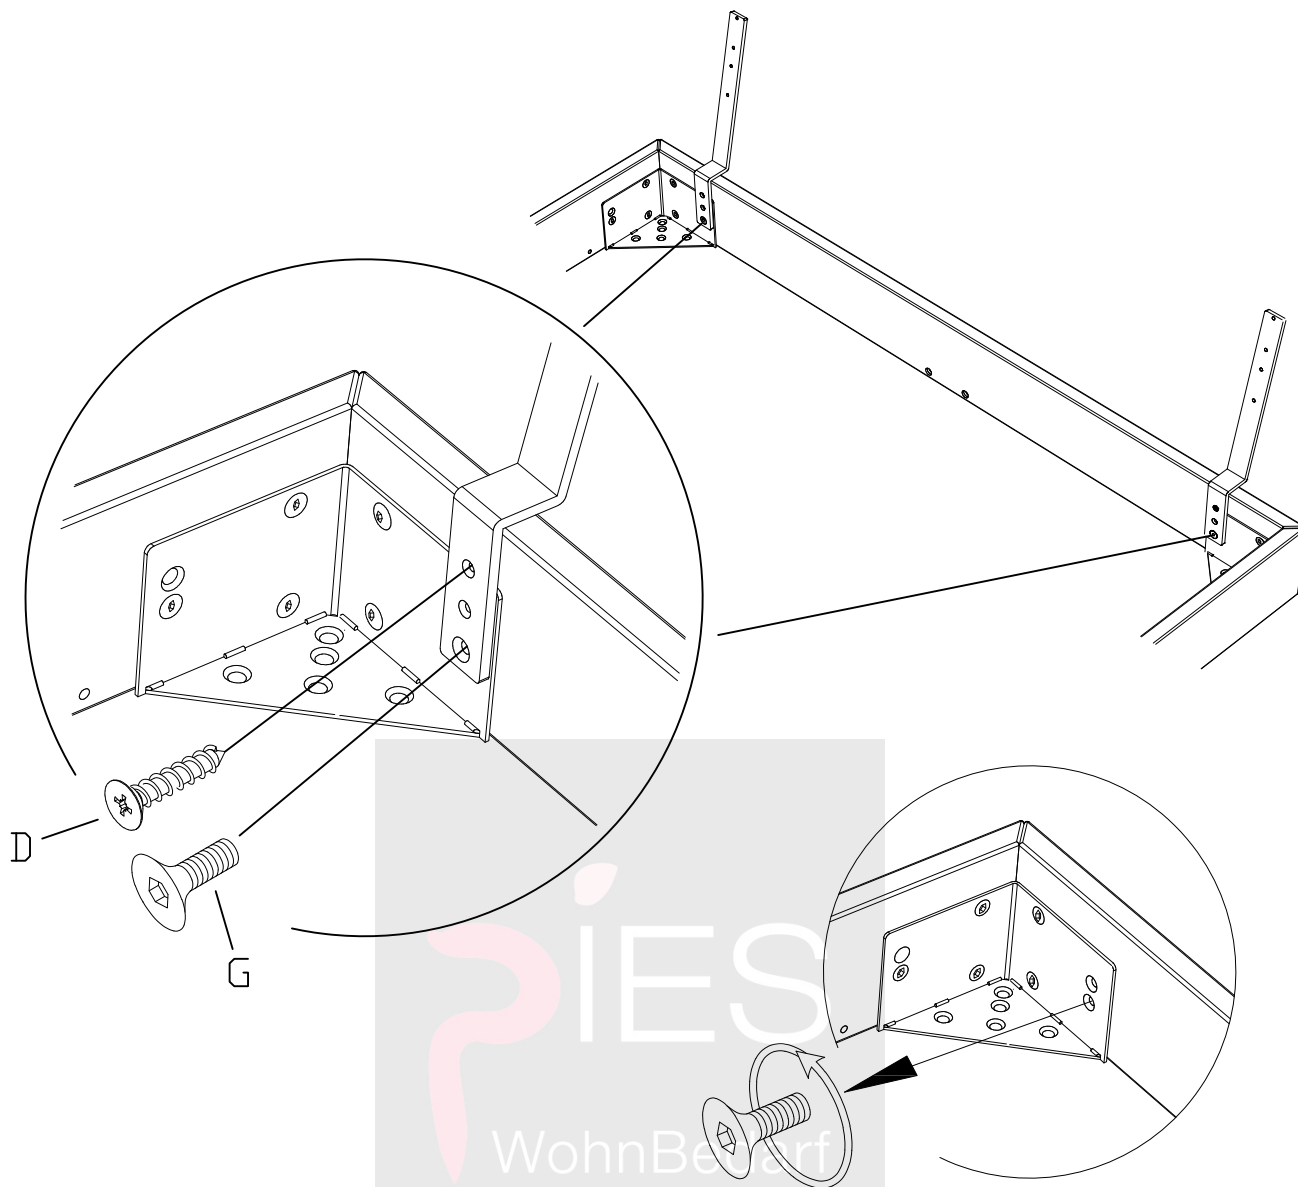


Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

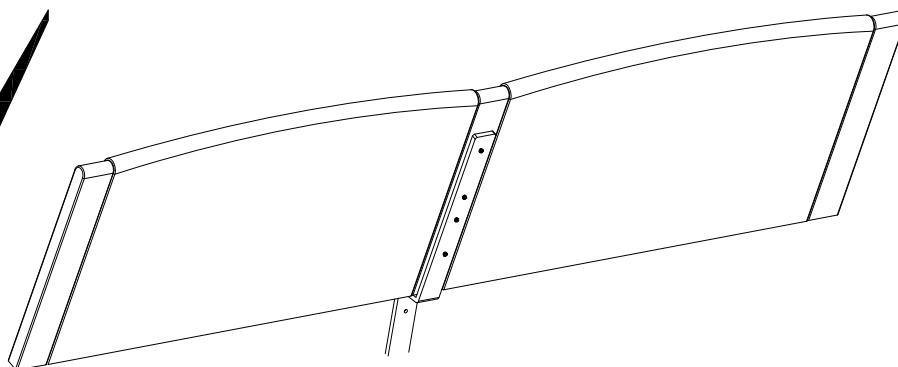


<p>A x2</p> 	<p>B x3</p> <p>Left Middle Right</p> 	<p>C x3</p>  <p>790.010</p>	<p>D x4</p>  <p>631.32100</p>	<p>E x8</p>  <p>631.04200</p>	
<p>F x8</p>  <p>631.04100</p>	<p>G x2</p>  <p>631.10600</p>	<p>H x16</p> <p>Ø10x40</p>  <p>630.02700</p>	<p>I x12</p>  <p>631.16500</p>	<p>J x2</p>  <p>630.76716</p>	<p>K x1</p> <p>SW5</p>  <p>631.10000</p>

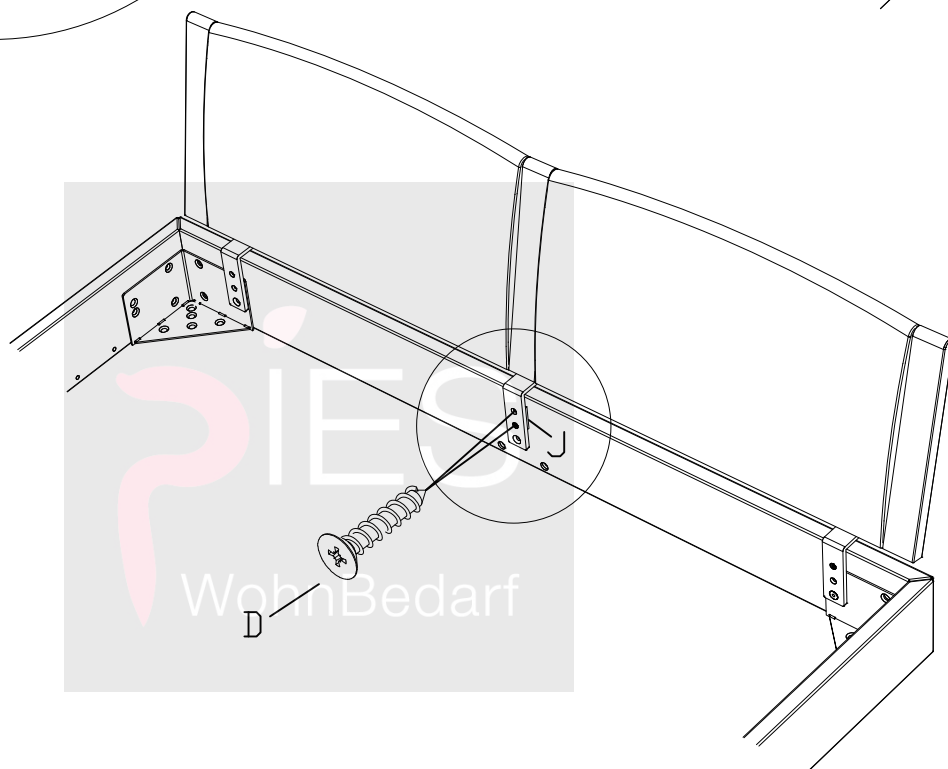
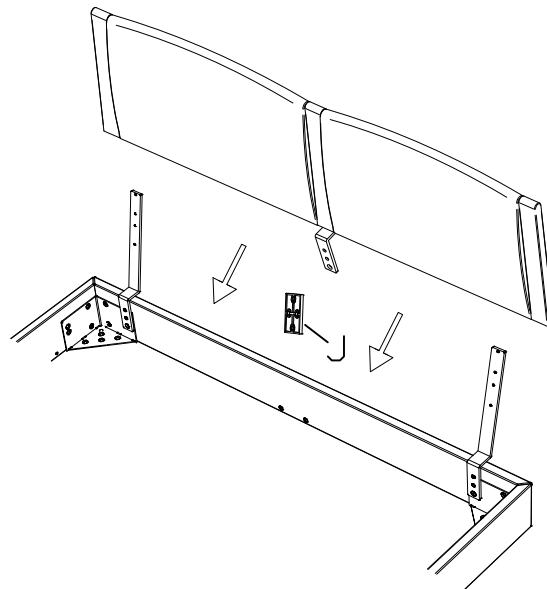
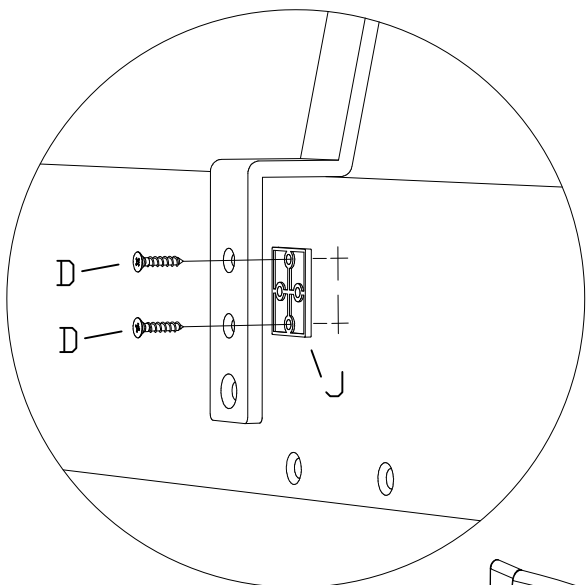




ACHTUNG  
ATTENTION  
BE CAREFUL  
ATTENZIONE !



3.



4.

