






MONTAGEANLEITUNG  
NOTICE DE MONTAGE  
ASSEMBLY INSTRUCTION  
ISTRUZIONE DI MONTAGGIO

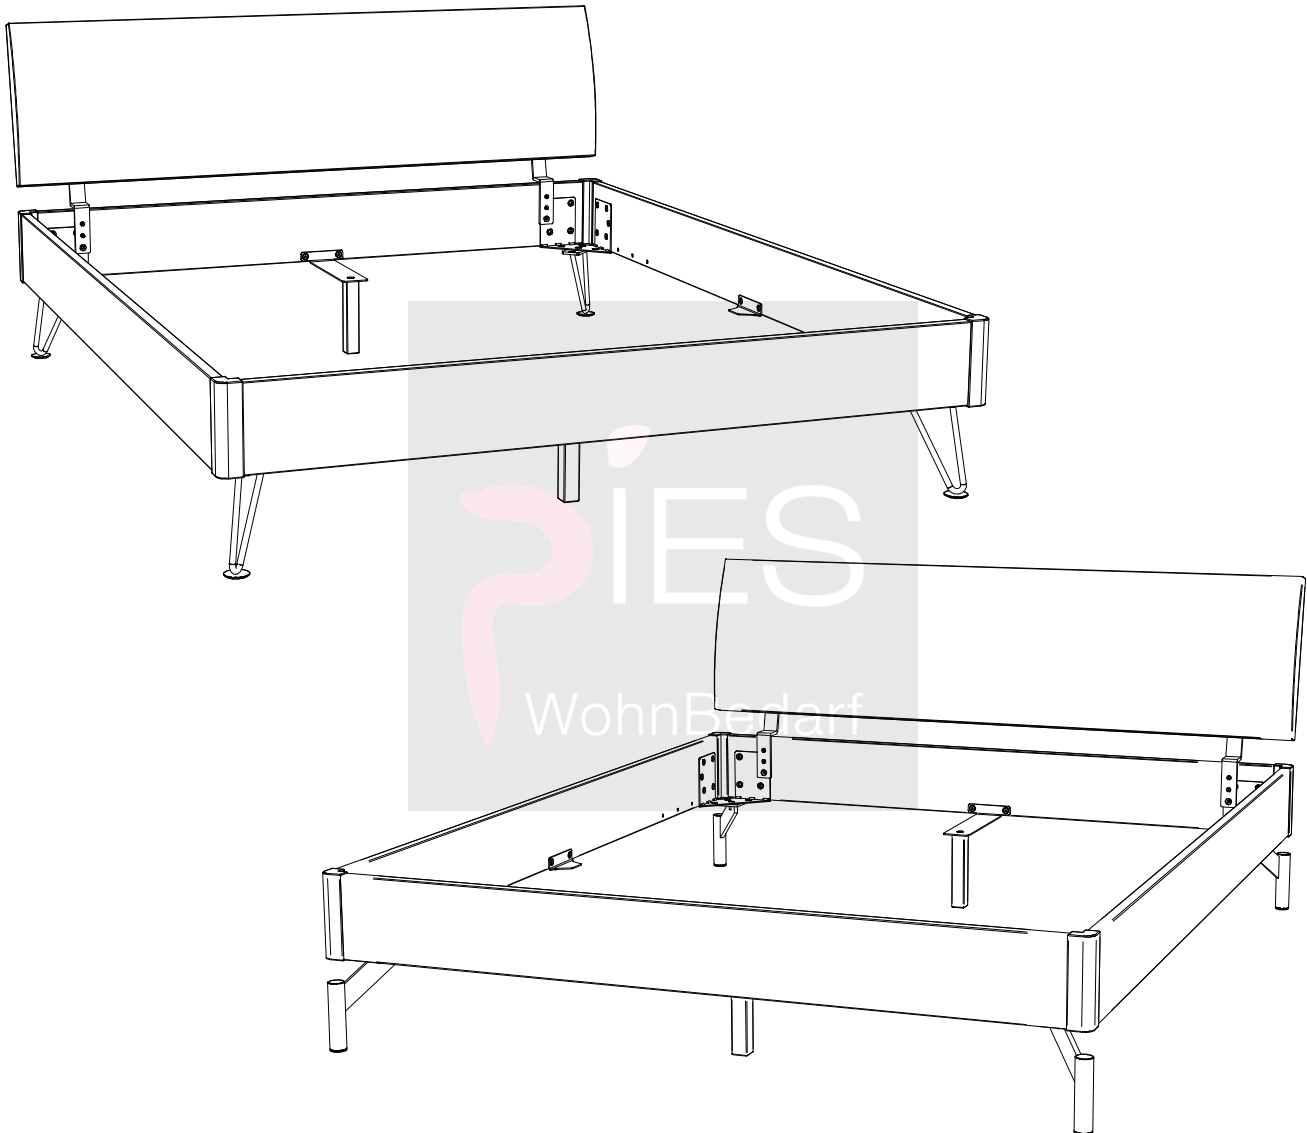

# Broni & Lugano















Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

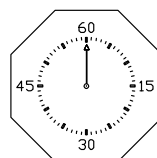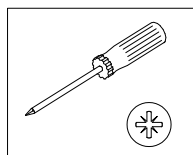


15.09.2022

660.01272

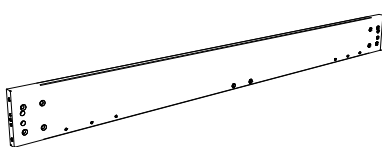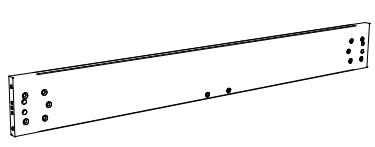
<p>A x2</p> 	<p>B x2</p> 	<p>C x4</p> 	<p>D x4</p>  <p>630.104</p>		
<p>E x2</p>  <p>630.099</p>	<p>F x36</p>  <p>631.872</p>	<p>G x24</p>  <p>630.024</p>	<p>H x16</p>  <p>631.06600</p>	<p>I x16</p>  <p>631.06400</p>	<p>Z x1</p>  <p>631.100</p>

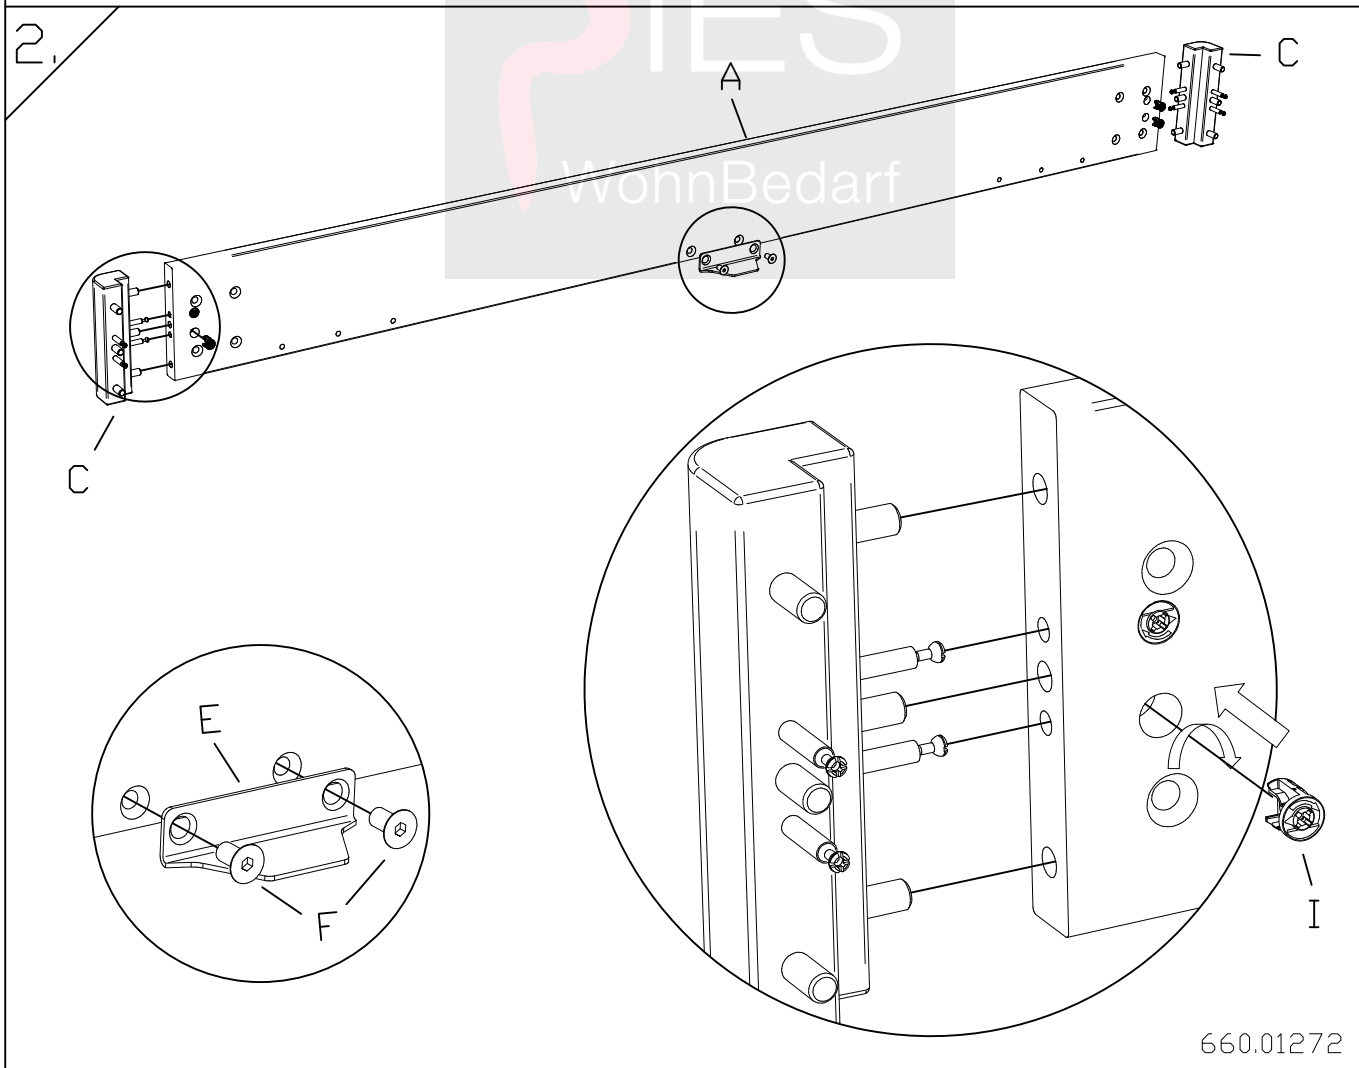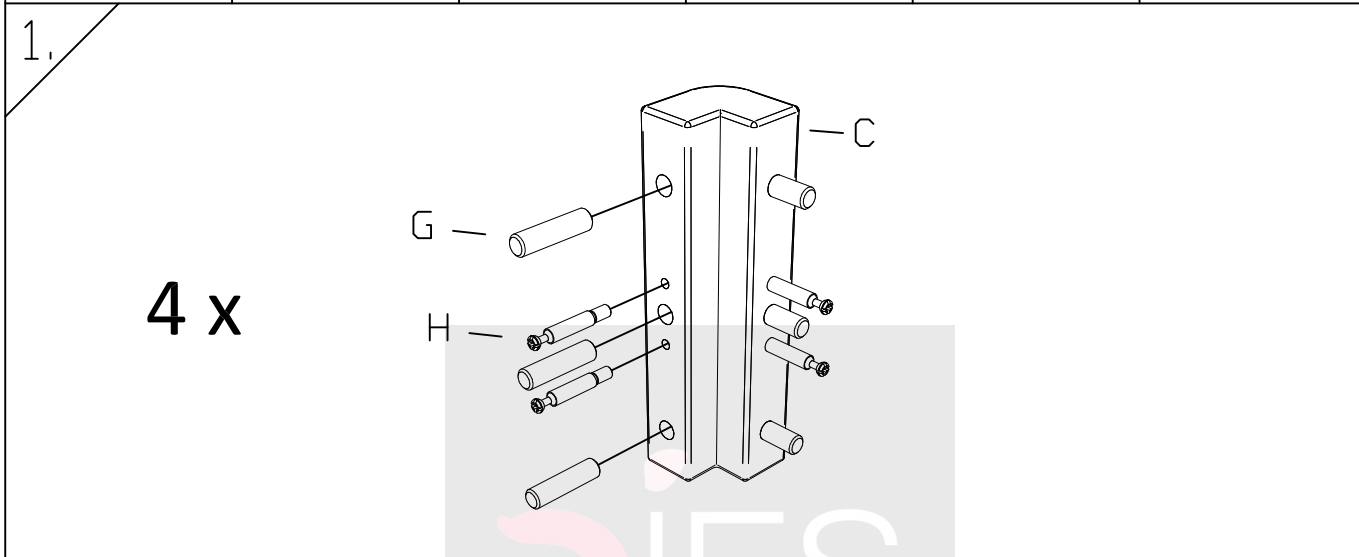


3.

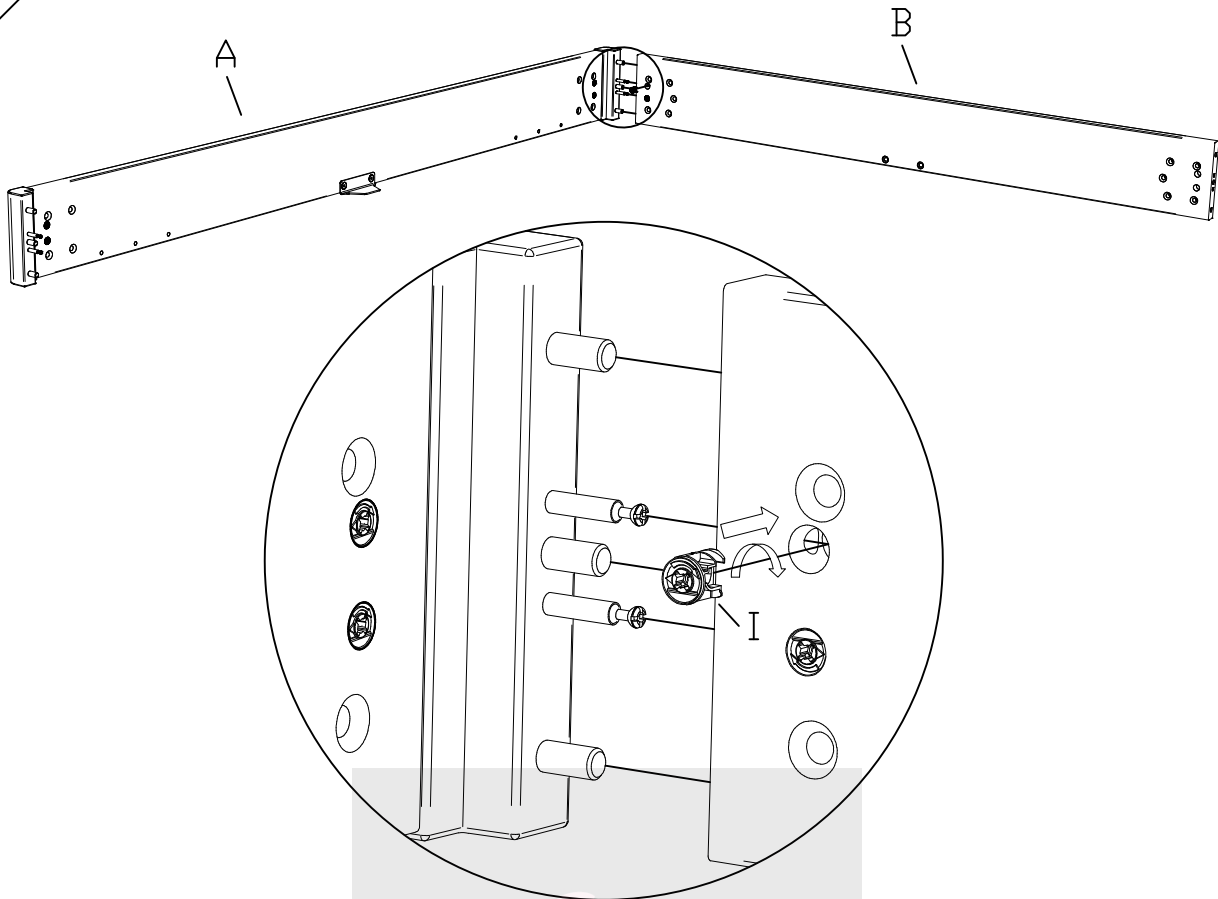


4.

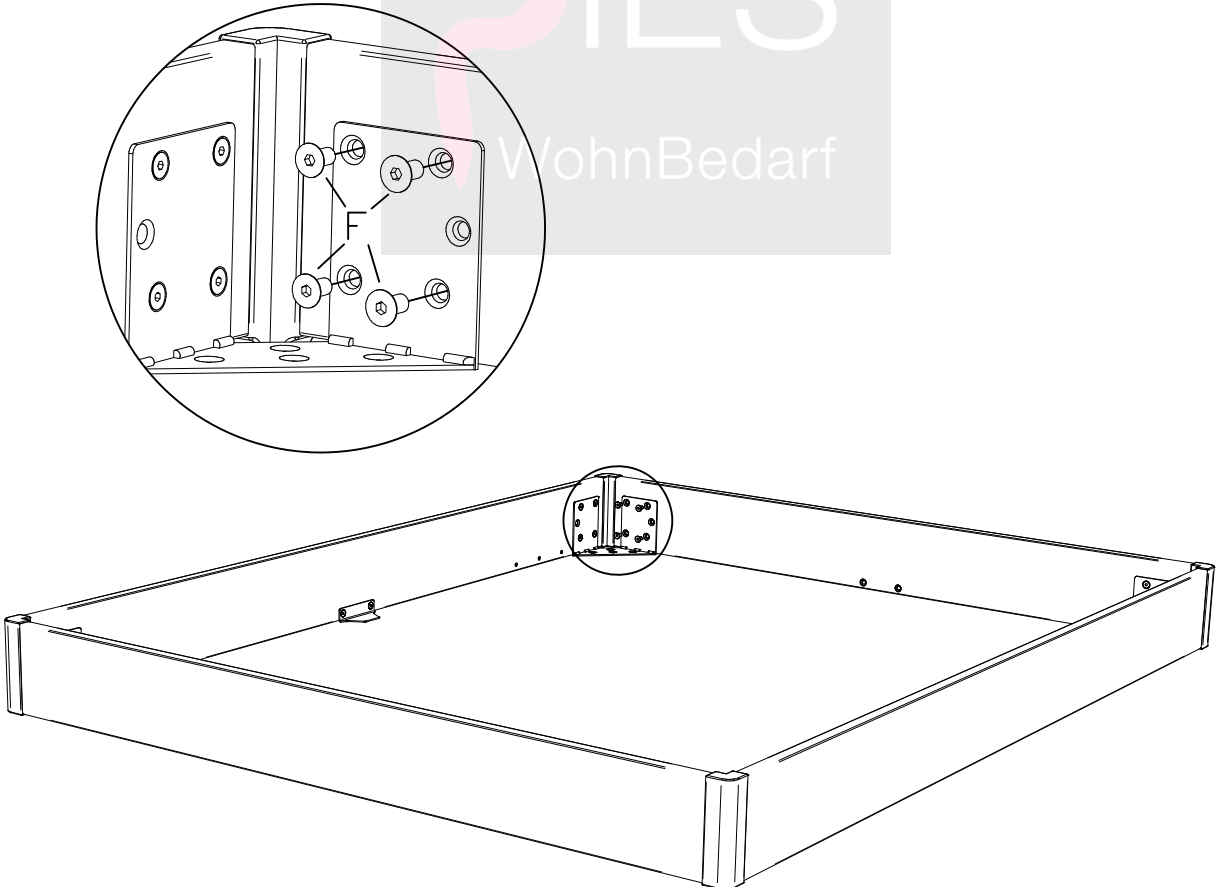






660.01272

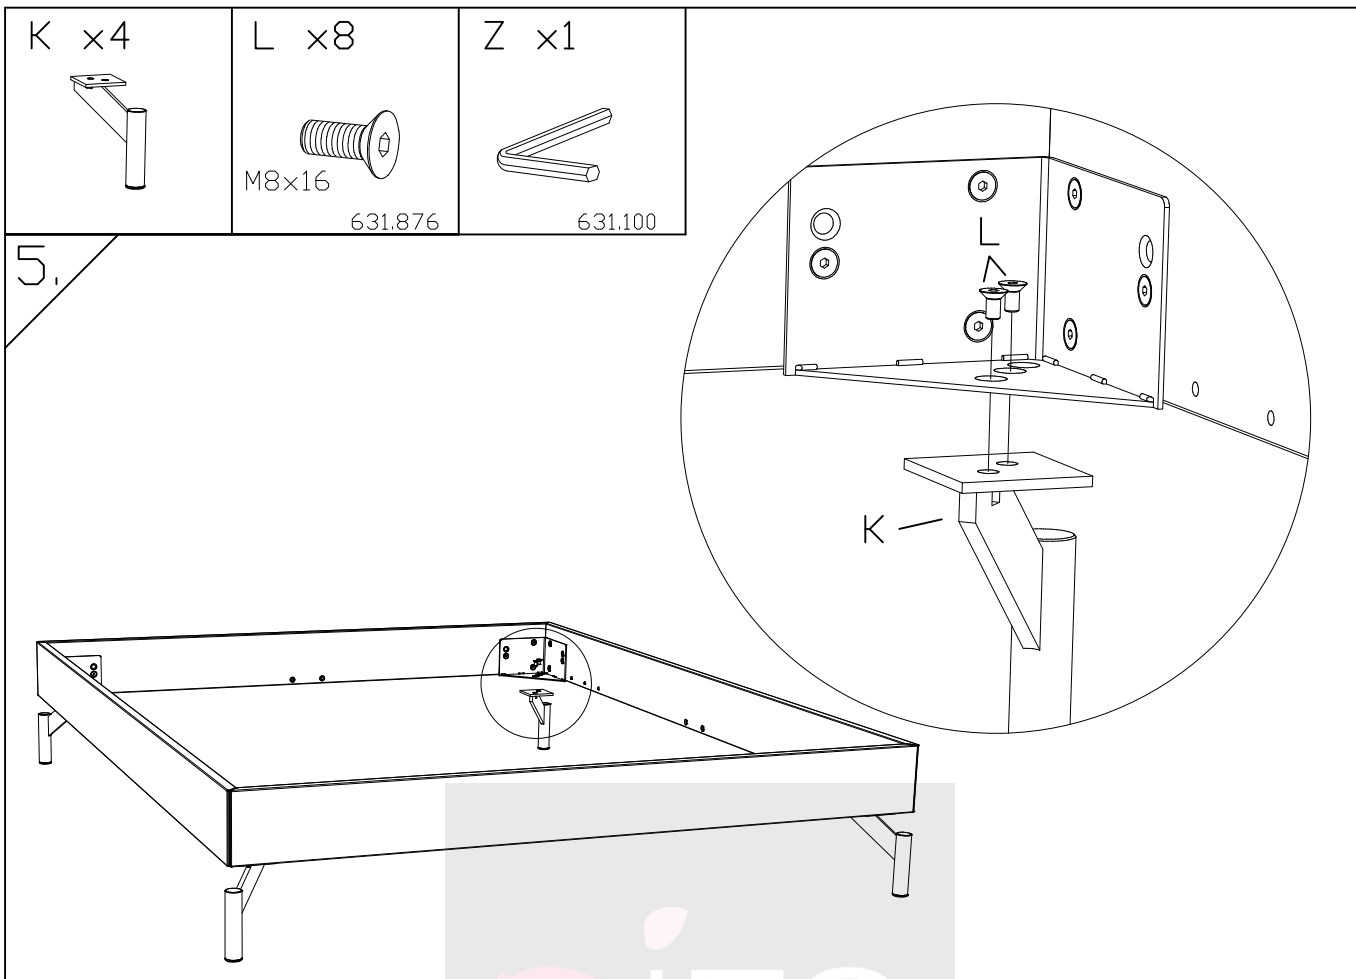

zusätzlich bei Breiten ab 160cm, Fusshöhe 20  
 additional for widths from 160cm, foot height 20  
 à partir des dimensions 160cm, Hauteur du pied 20  
 a partire della misura 160cm, Altezza del piede 20

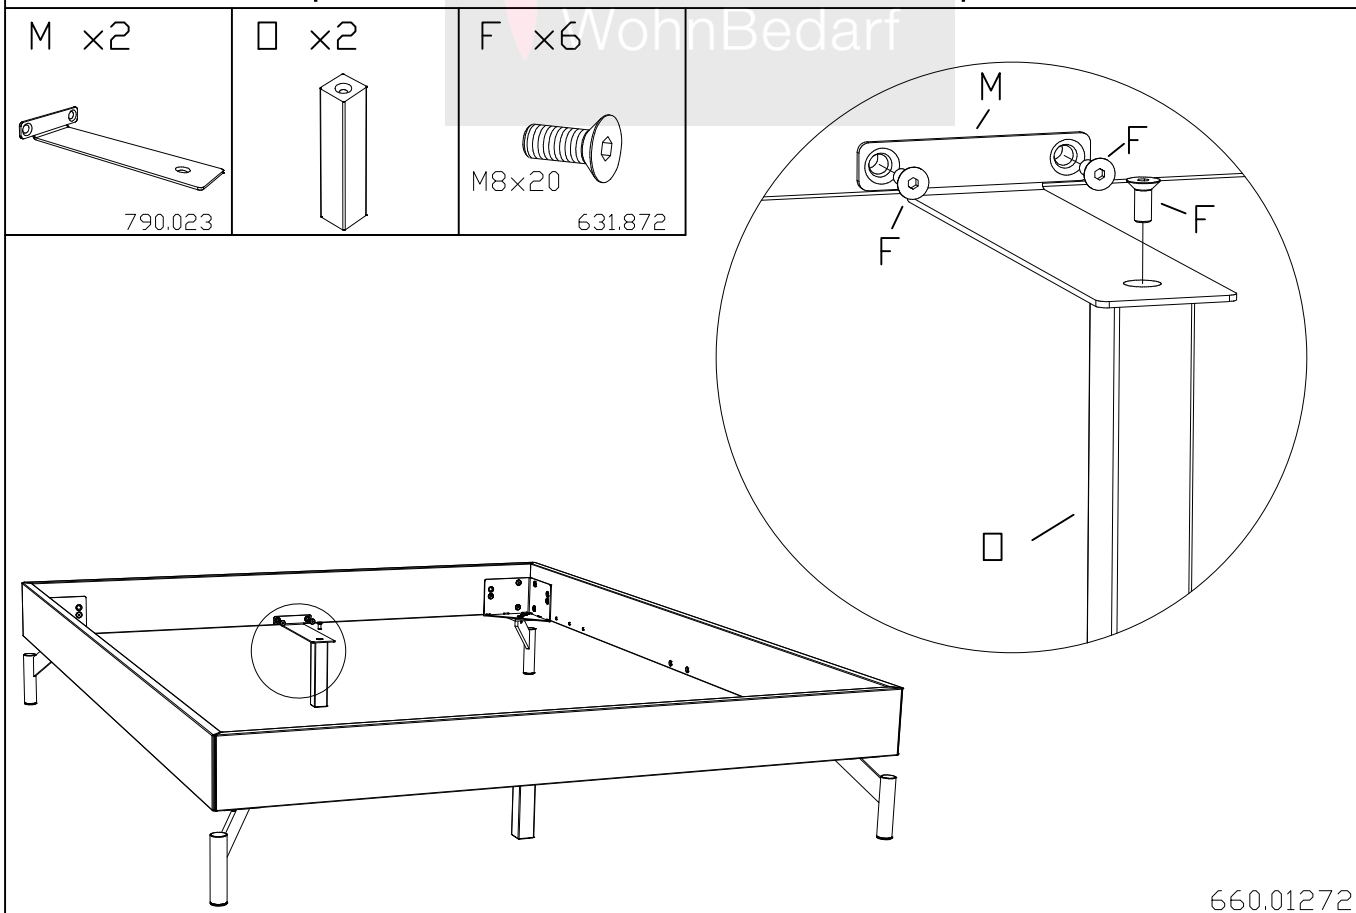

660.01272
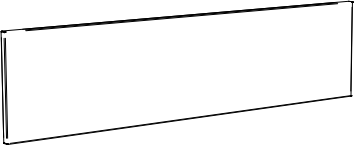
<p>P x1</p> 	<p>Q x2</p>  <p>790.006</p>	<p>R x4</p> <p>Ø5x25</p>  <p>631.16500</p>	<p>S x2</p> <p>M8x25</p>  <p>631.10600</p>	<p>T x2</p> <p>Ø5x25</p>  <p>631.32100</p>
---	--	---	---	---

