







MONTAGEANLEITUNG
NOTICE DE MONTAGE
ASSEMBLY INSTRUCTION
ISTRUZIONE DI MONTAGGIO

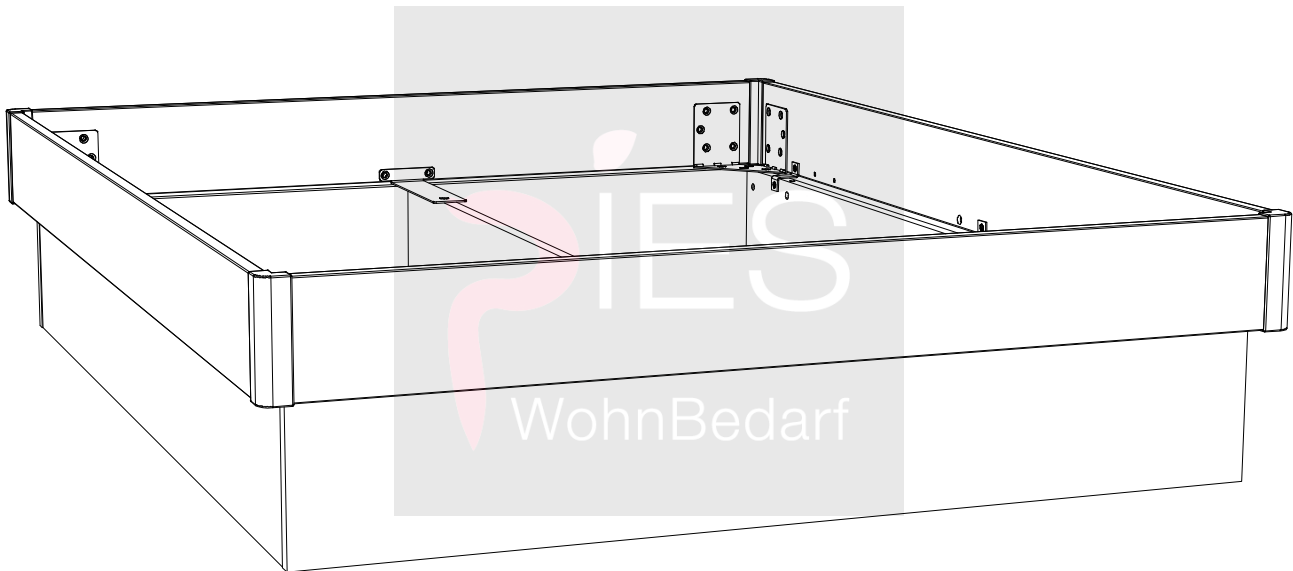

Practico-Rono















Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

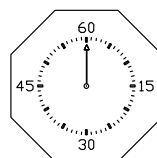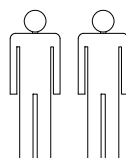
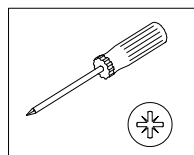












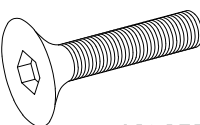
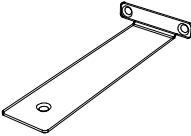



15.09.2022



660.01287
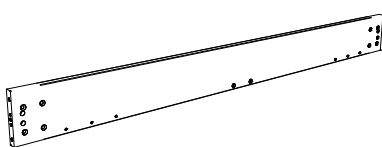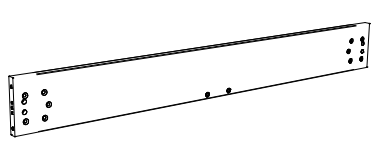
<p>A x2</p> 	<p>B x2</p> 	<p>C x4</p> 	<p>D x4</p>  <p>630.104</p>		
<p>E x2</p>  <p>630.099</p>	<p>F x36</p>  <p>631.872</p>	<p>G x24</p>  <p>630.024</p>	<p>H x16</p>  <p>631.06400</p>	<p>I x16</p>  <p>631.06600</p>	<p>Z x1</p>  <p>631.100</p>

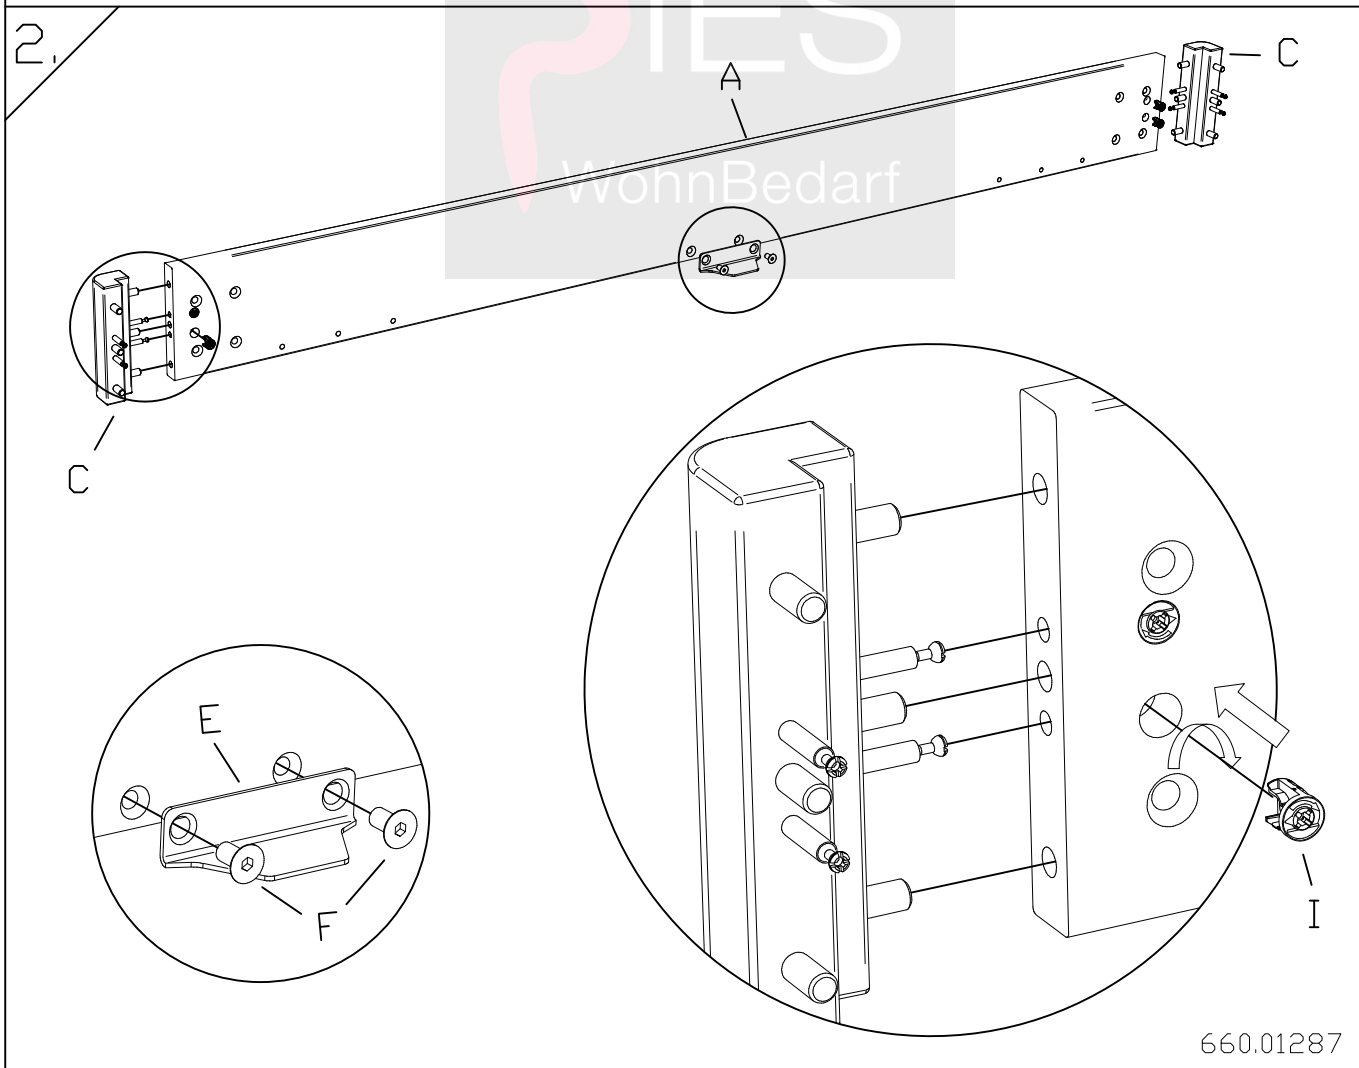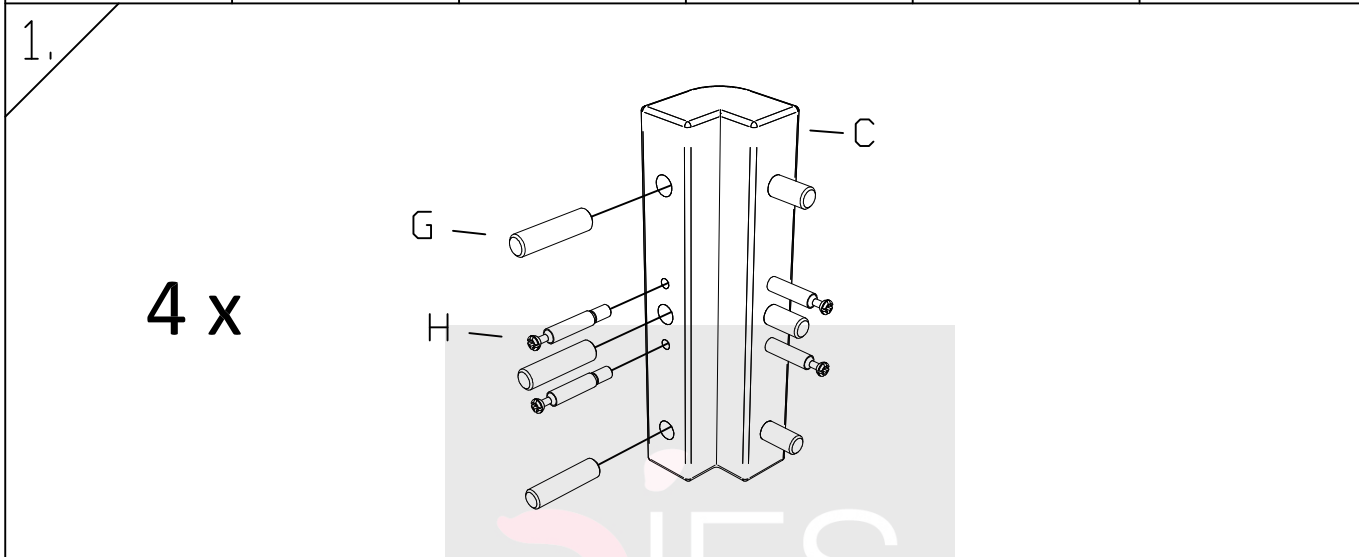


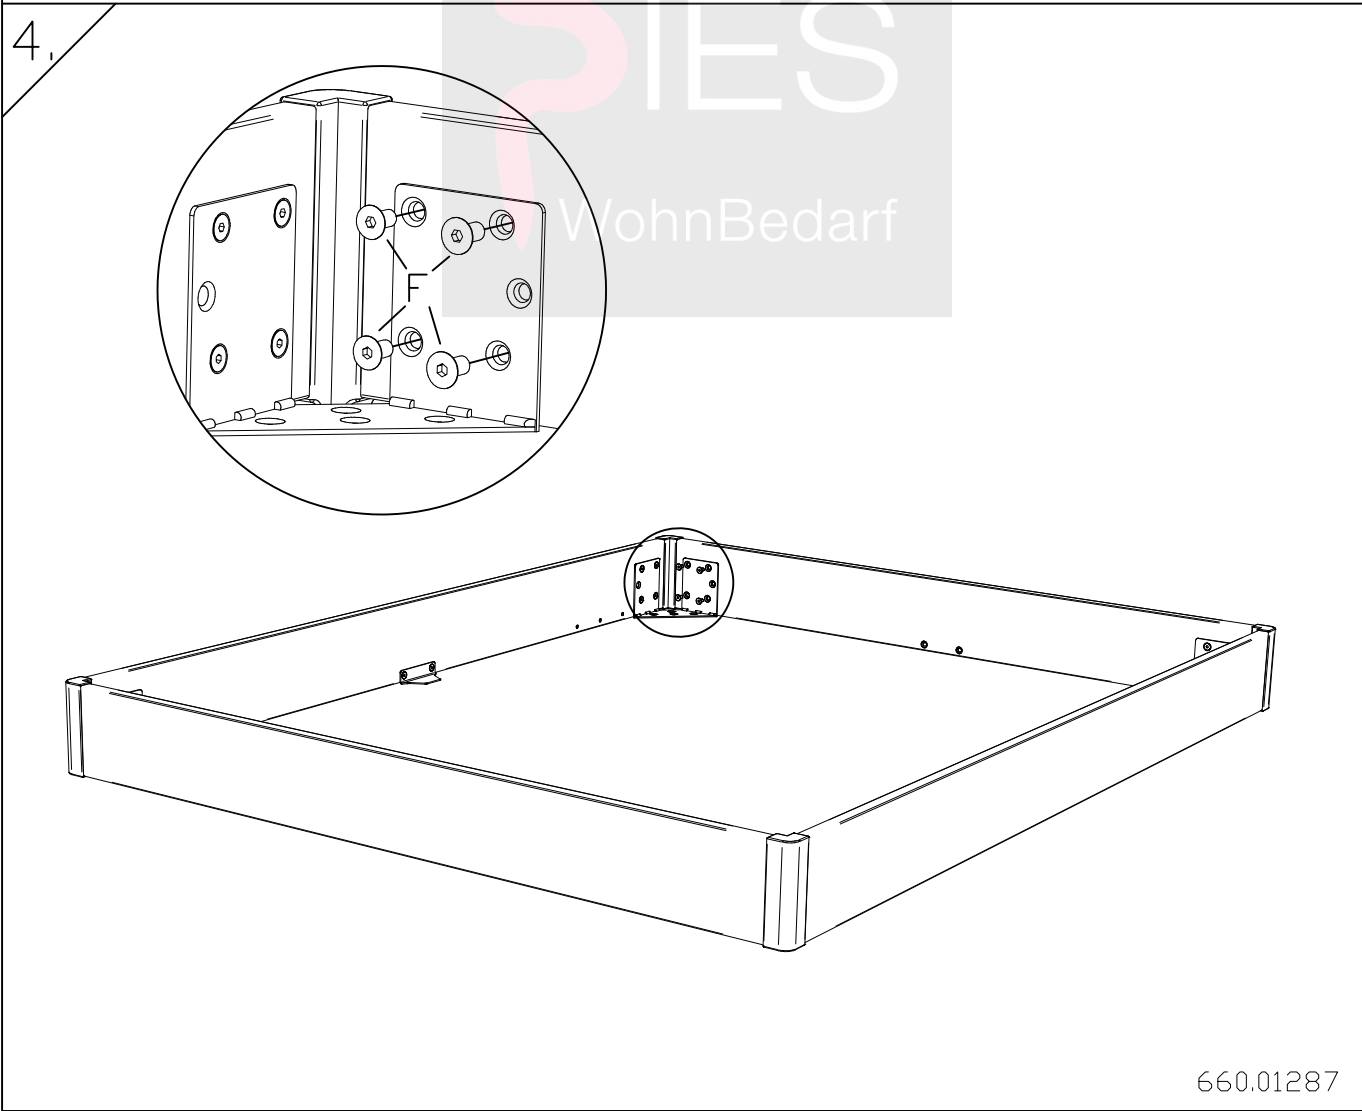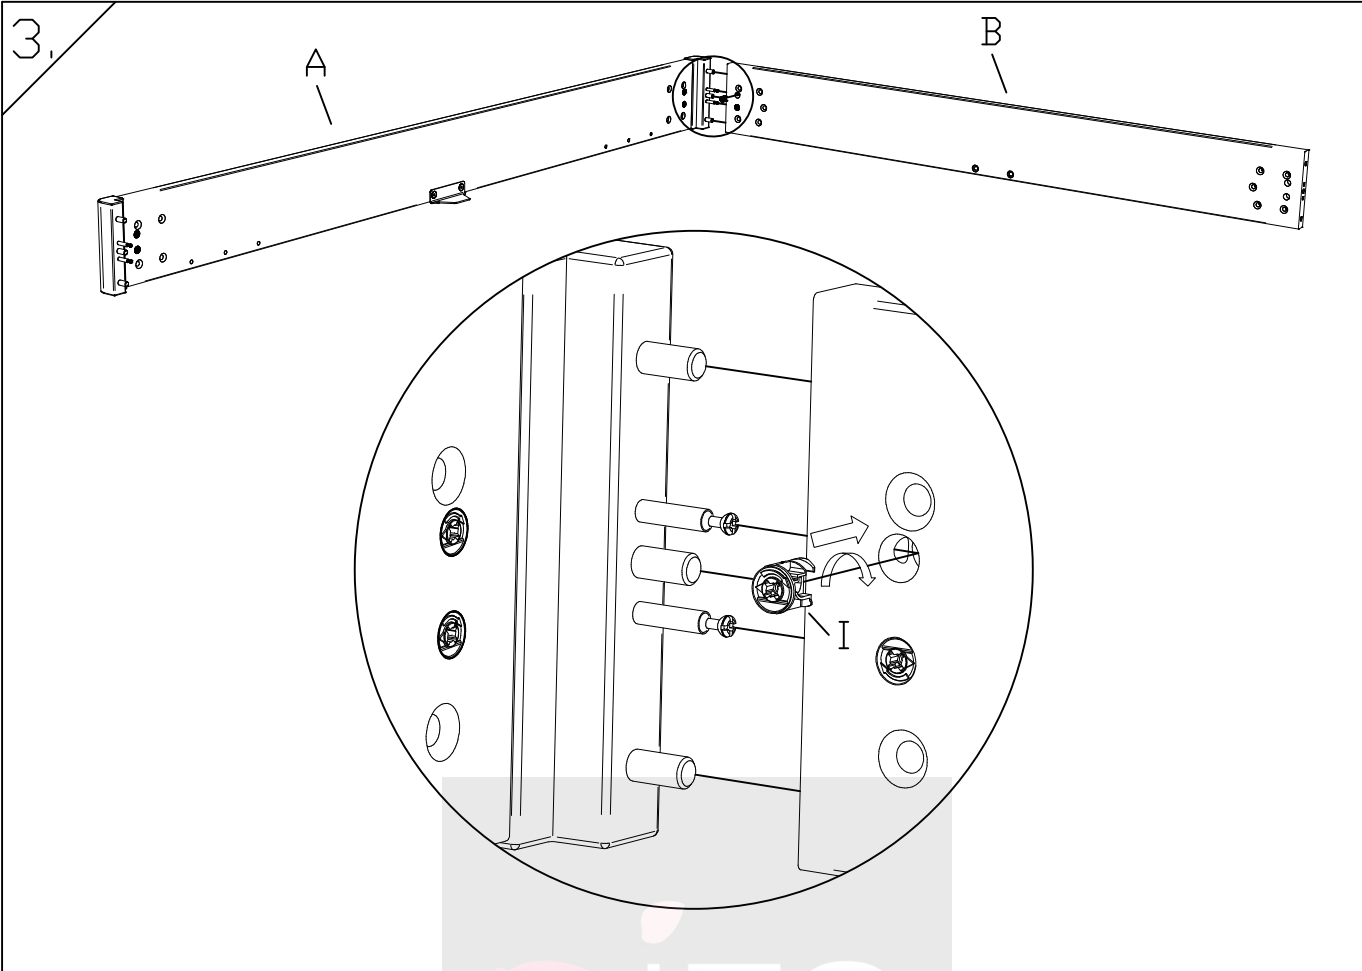

<p>F x4</p>  <p>631.872</p>	<p>J x10</p>  <p>631.601</p>	<p>K x2</p> 	<p>L x2</p> 		
<p>M x6</p>  <p>790.097</p>	<p>I x12</p>  <p>631.066</p>	<p>H x12</p>  <p>631.064</p>	<p>G x12</p>  <p>630.024</p>	<p>□ x2</p>  <p>631.880</p>	<p>P x2</p>  <p>631.611</p>
<p>Q x2</p>  <p>631.877</p>	<p>R x2</p>  <p>790.023</p>	<p>S x1</p> 		<p>Y x1</p>  <p>631.101</p>	<p>Z x1</p>  <p>631.100</p>

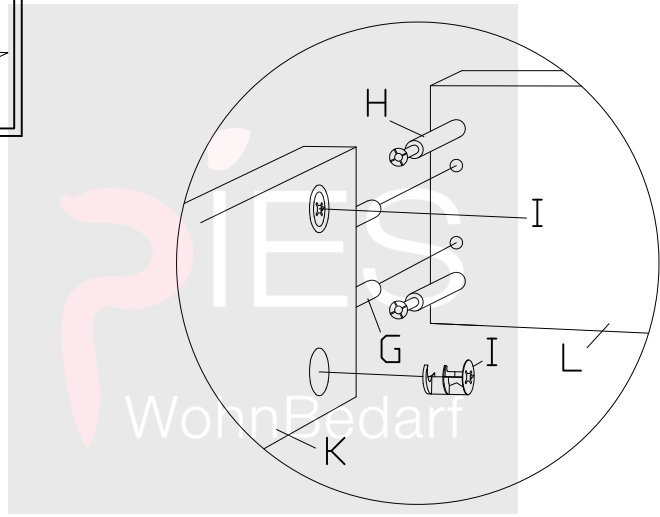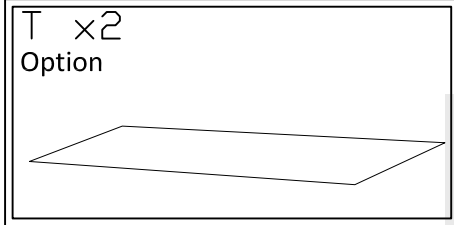


5.

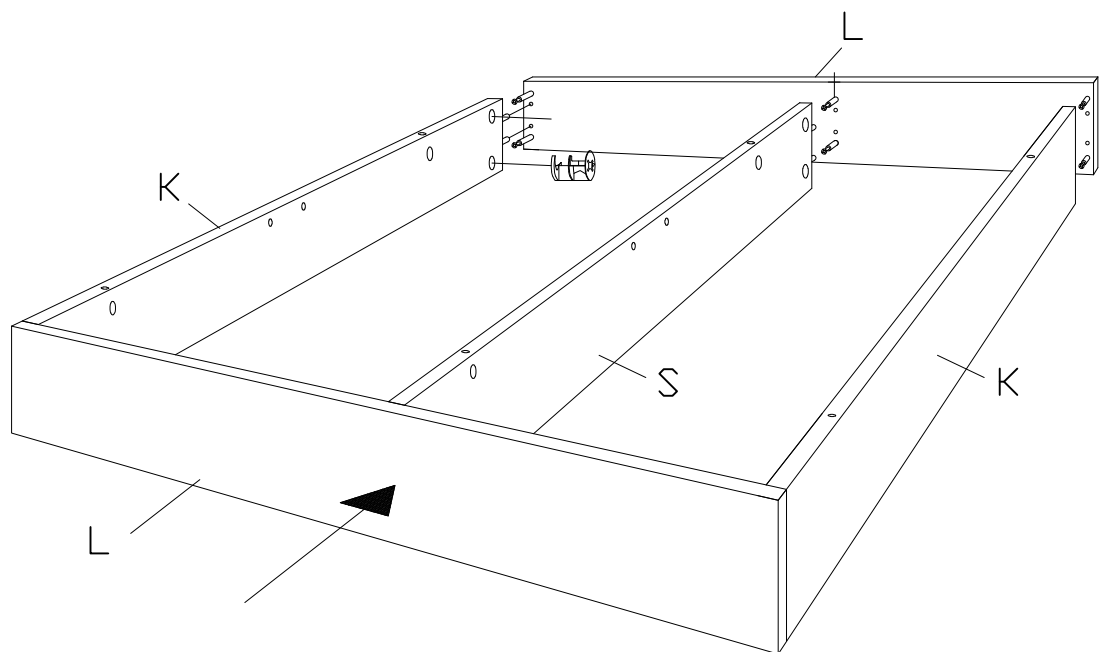


660.01287

6.

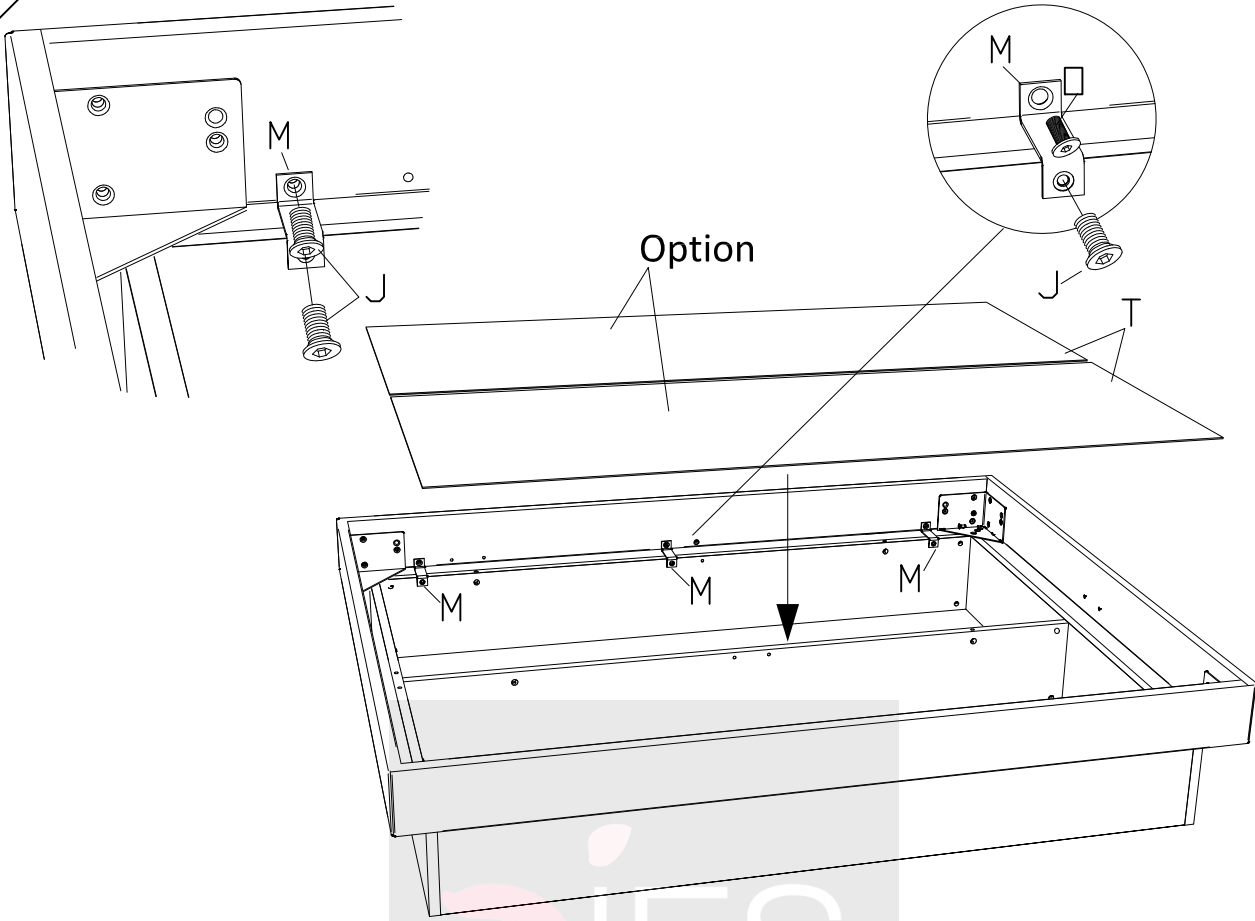


7.

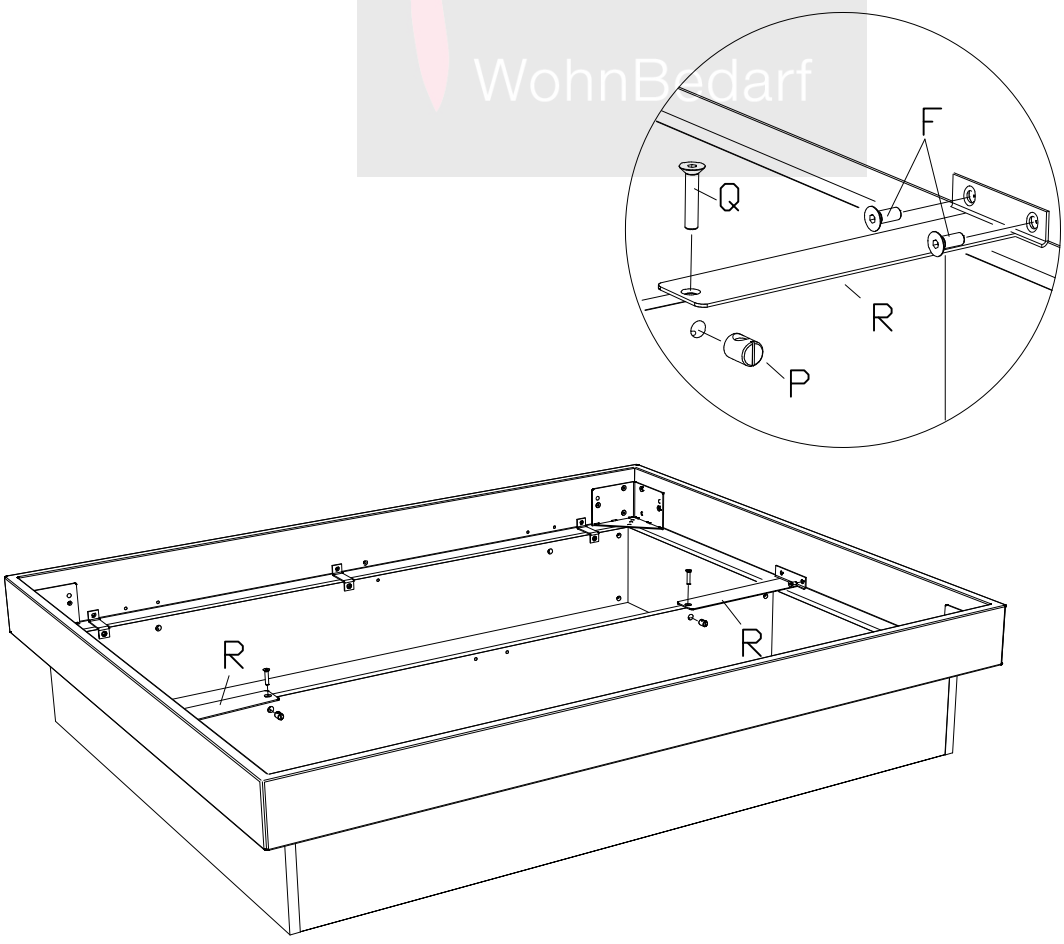

660.01287

8.

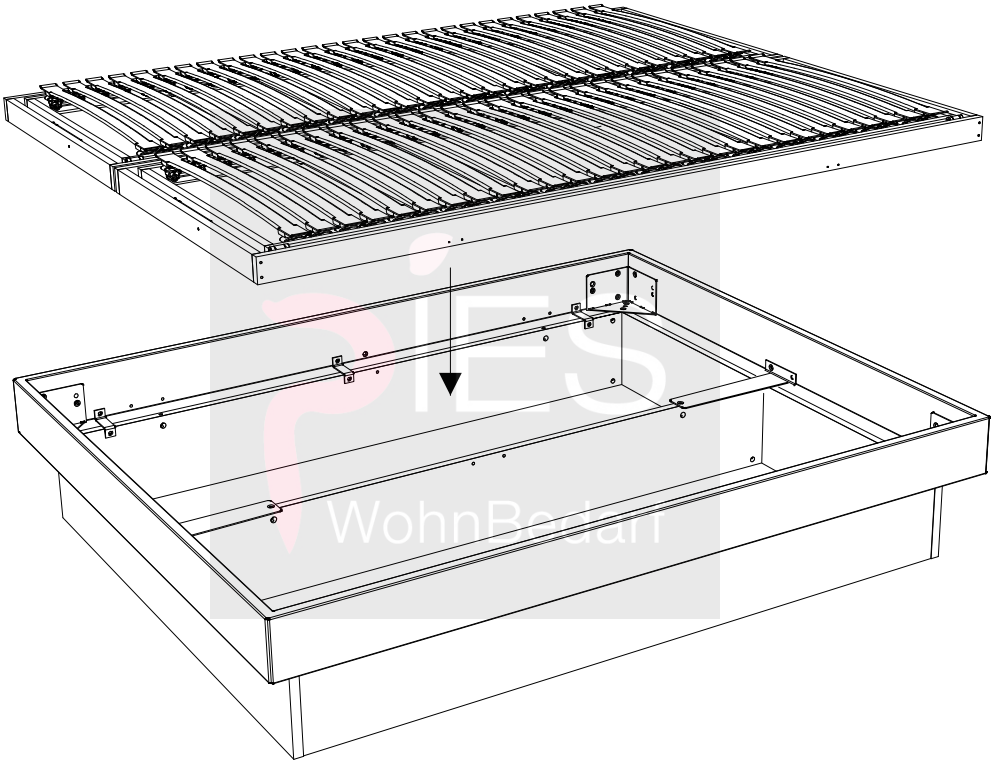

660.01287