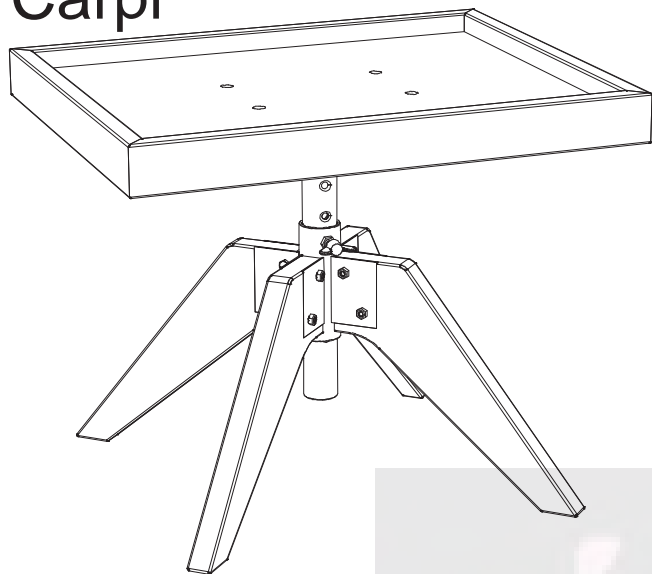




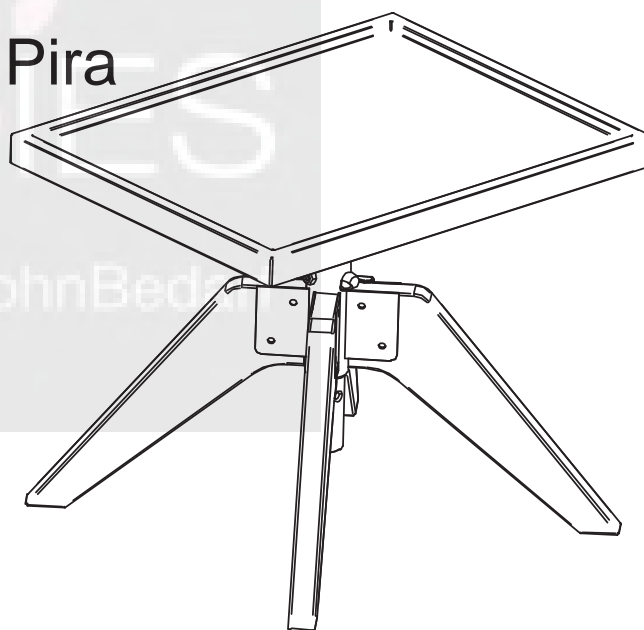
MONTAGEANLEITUNG  
NOTICE DE MONTAGE  
ASSEMBLY INSTRUCTION  
ISTRUZIONE DI MONTAGGIO



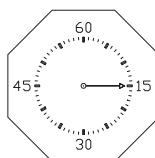
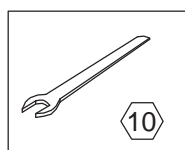
Carpi



Pira















Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

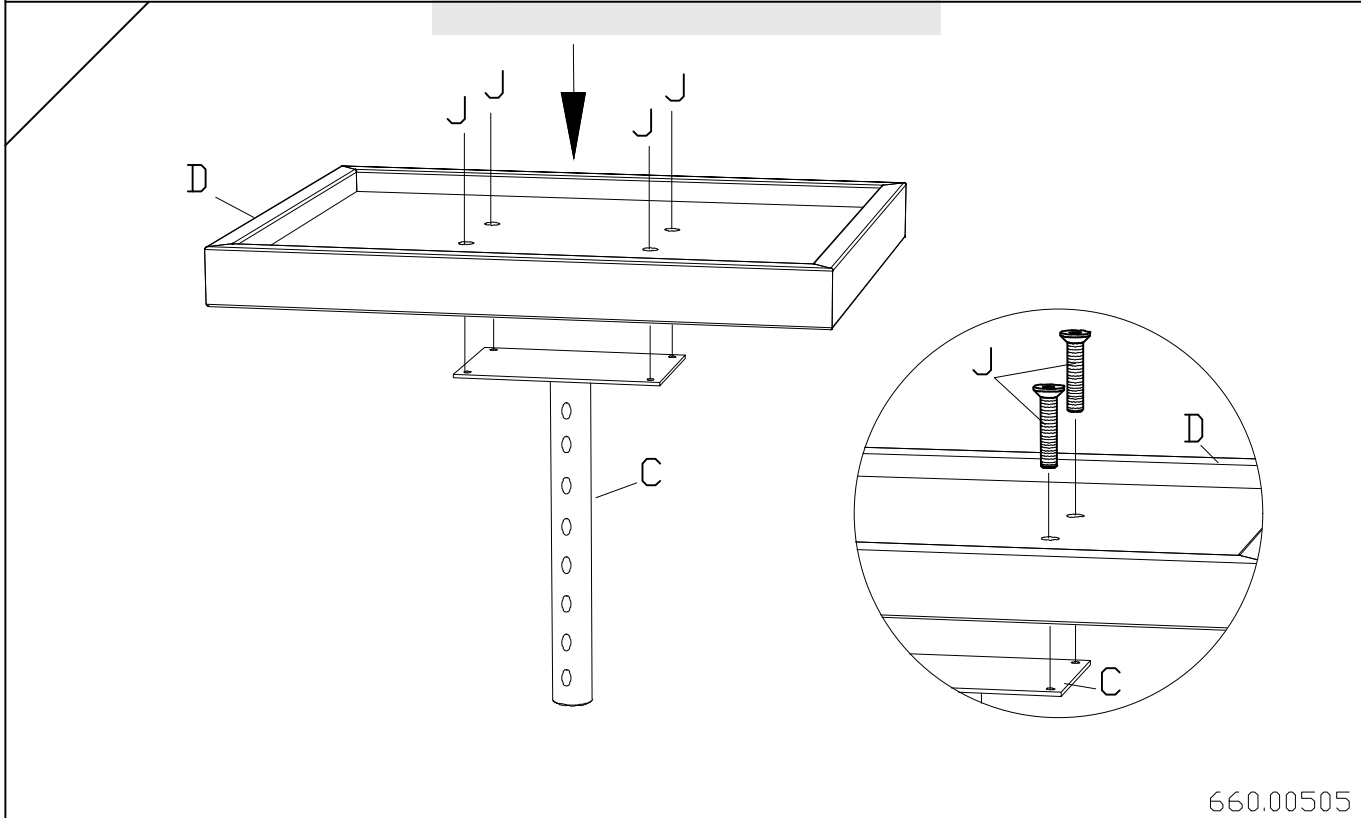
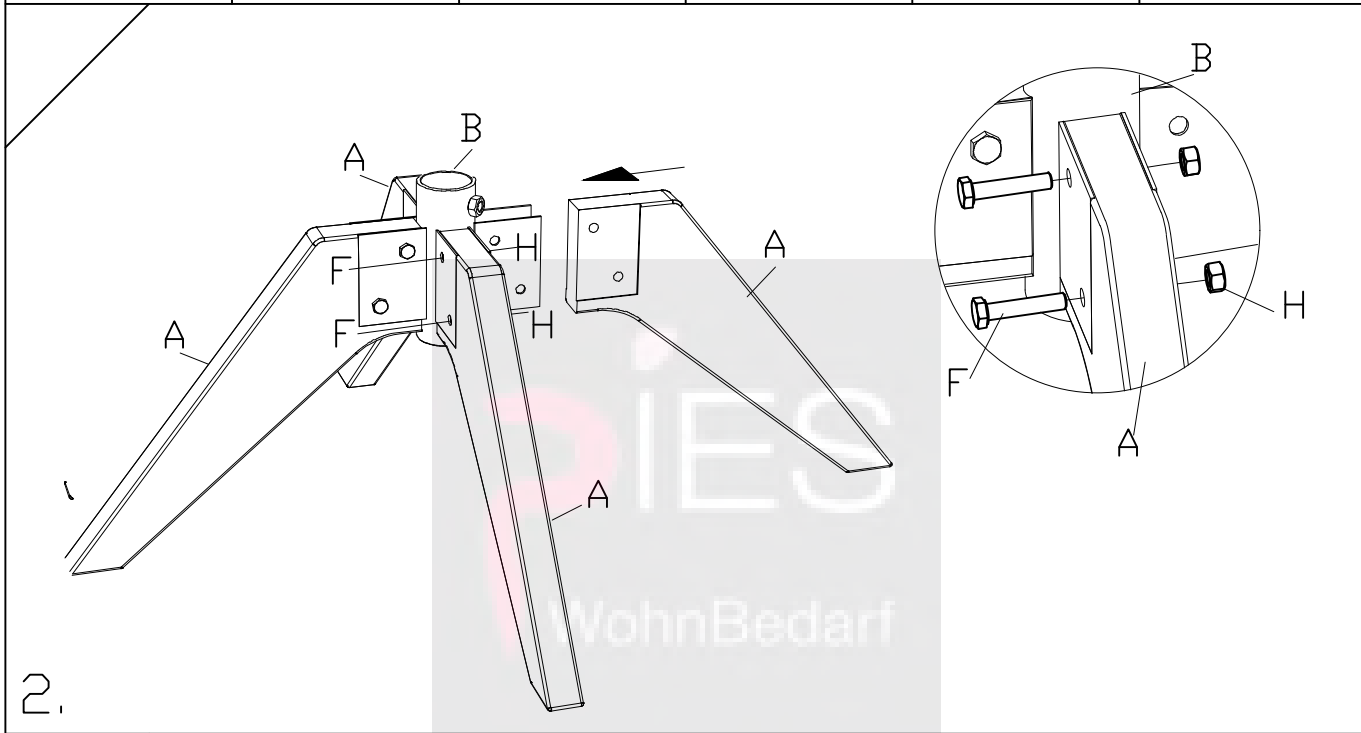


09.04.2018

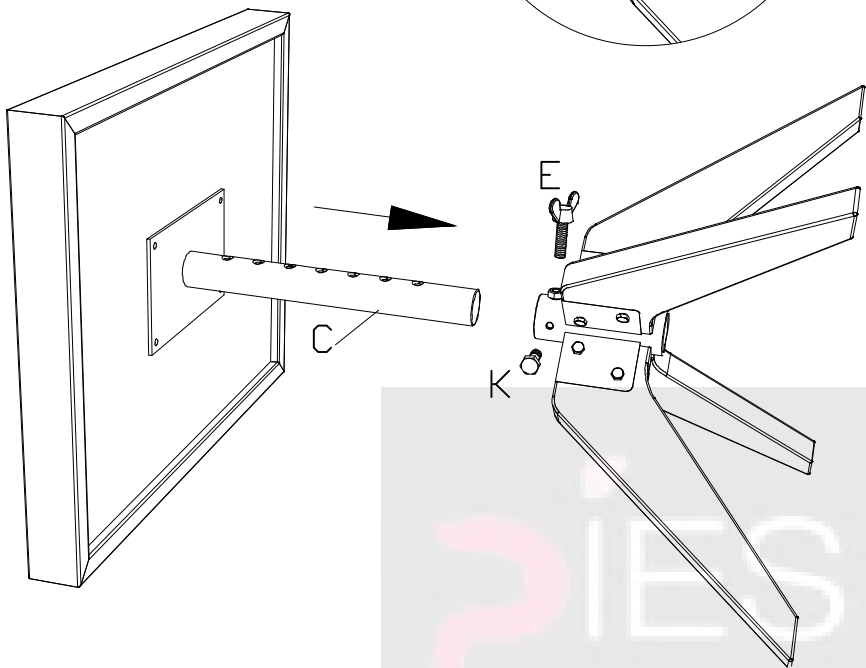
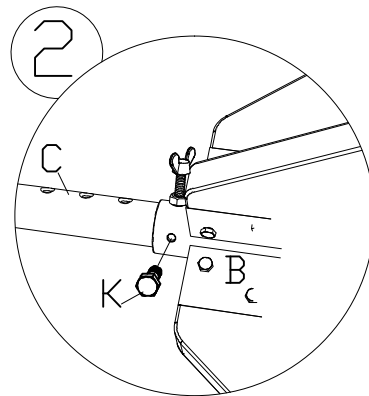
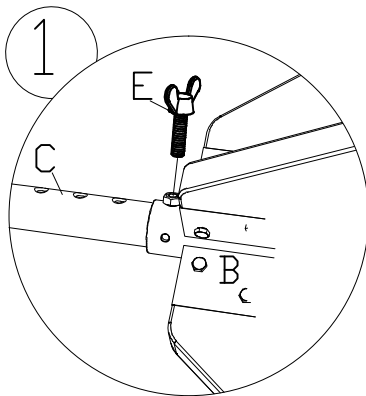
660.00505

# Carpi

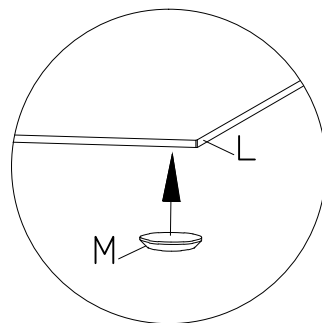
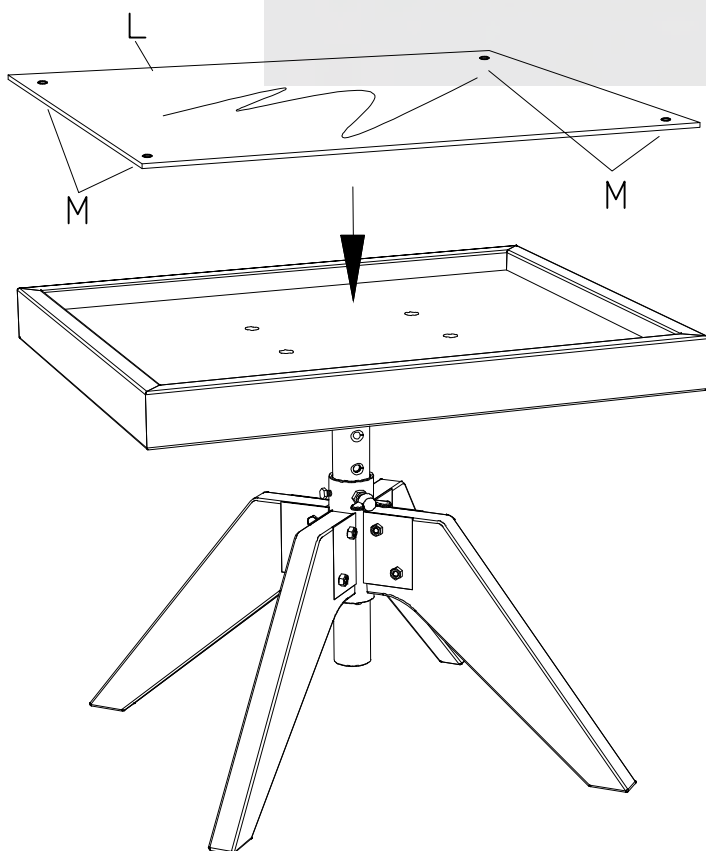
<p>A x4</p> 	<p>B x1</p> 	<p>C x1</p> 	<p>D x1</p> 	<p>E x1</p>  <p>631.00299</p>	<p>F x8</p>  <p>631.081</p>
<p>H x8</p>  <p>1.</p> <p>631.882</p>	<p>J x4</p>  <p>631.003</p>	<p>K x1</p>  <p>631.083</p>	<p>L x1</p>  <p>633.327</p>	<p>M x4</p>  <p>630.77300</p>	<p>Z x1</p>  <p>631.101</p>



3.












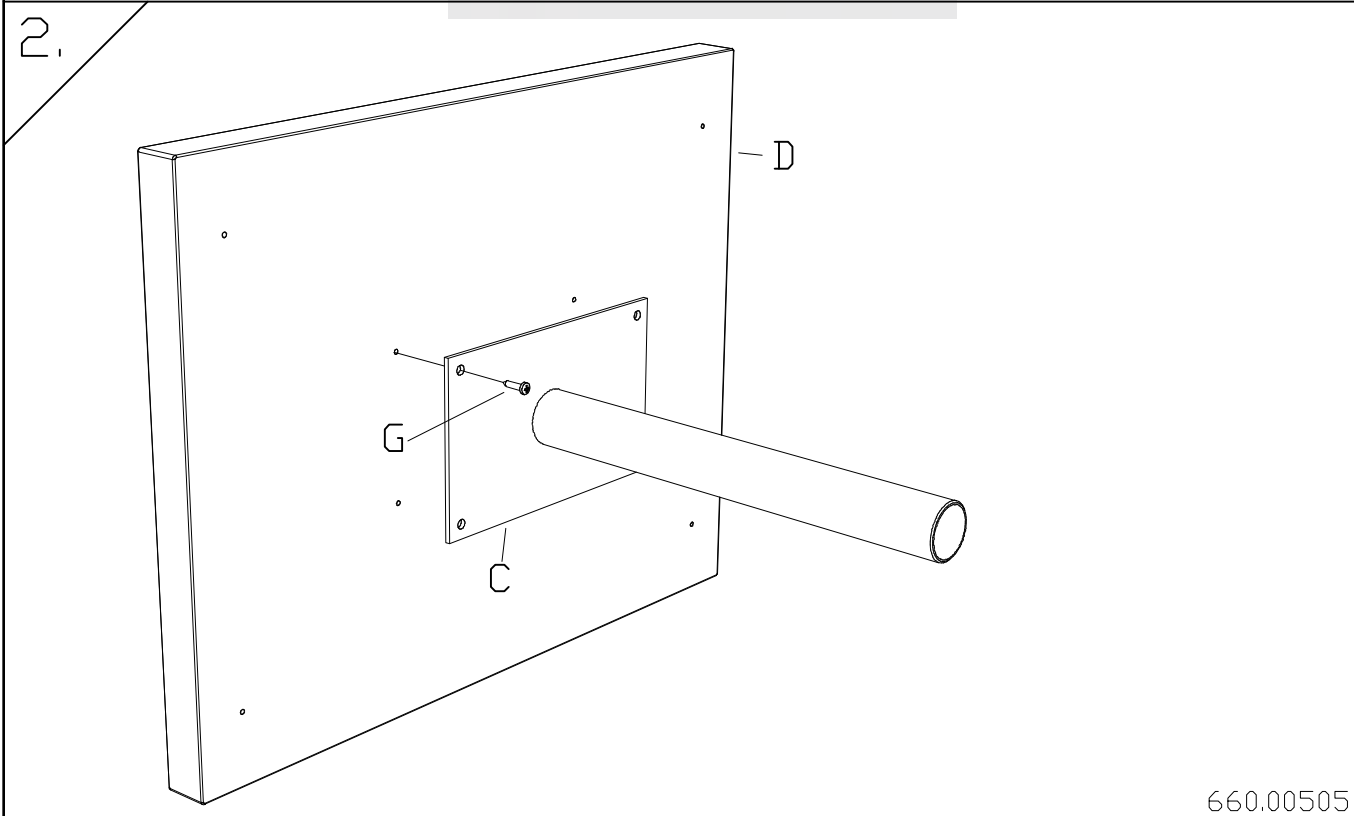
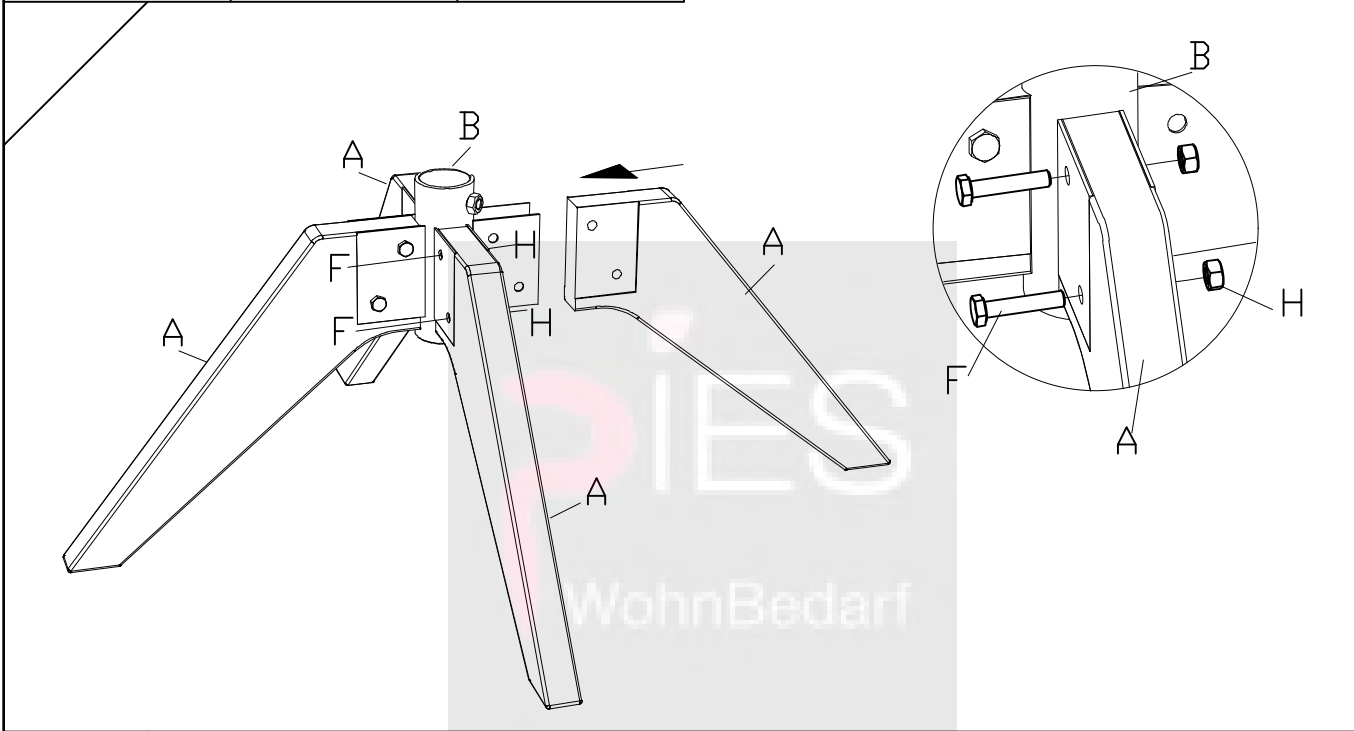
4.



660.00505

# Pira

<p>A x4</p> 	<p>B x1</p> 	<p>C x1</p> 	<p>D x1</p> 	<p>E x1</p>  <p>631.00299</p>	<p>F x8</p>  <p>631.081</p>
<p>H x8</p>  <p>1. 631.882</p>	<p>K x1</p>  <p>631.083</p>	<p>G x4</p>  <p>631.80400</p>			



660.00505

3.

