







MONTAGEANLEITUNG
NOTICE DE MONTAGE
ASSEMBLY INSTRUCTION
ISTRUZIONE DI MONTAGGIO

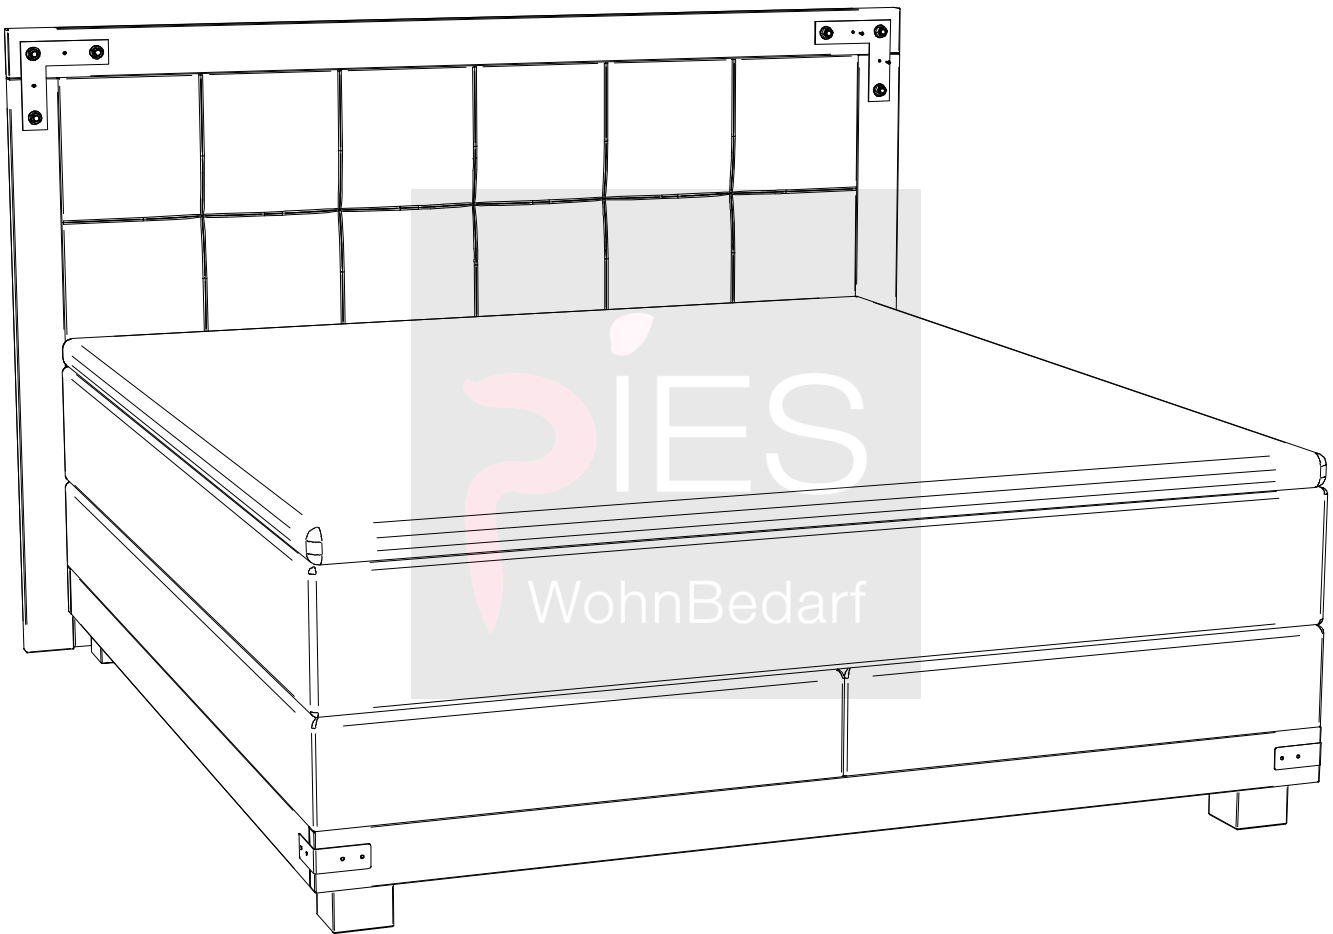

Chicago







Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

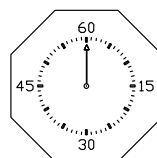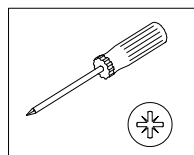




28.09.2021

660.01183

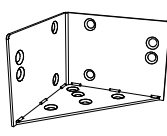
<p>A x2</p> 	<p>B x2</p> 	<p>C x4</p>  <p>630.101</p>	<p>D x16 M8 x20</p>  <p>631.872</p>
---	---	--	--



1.

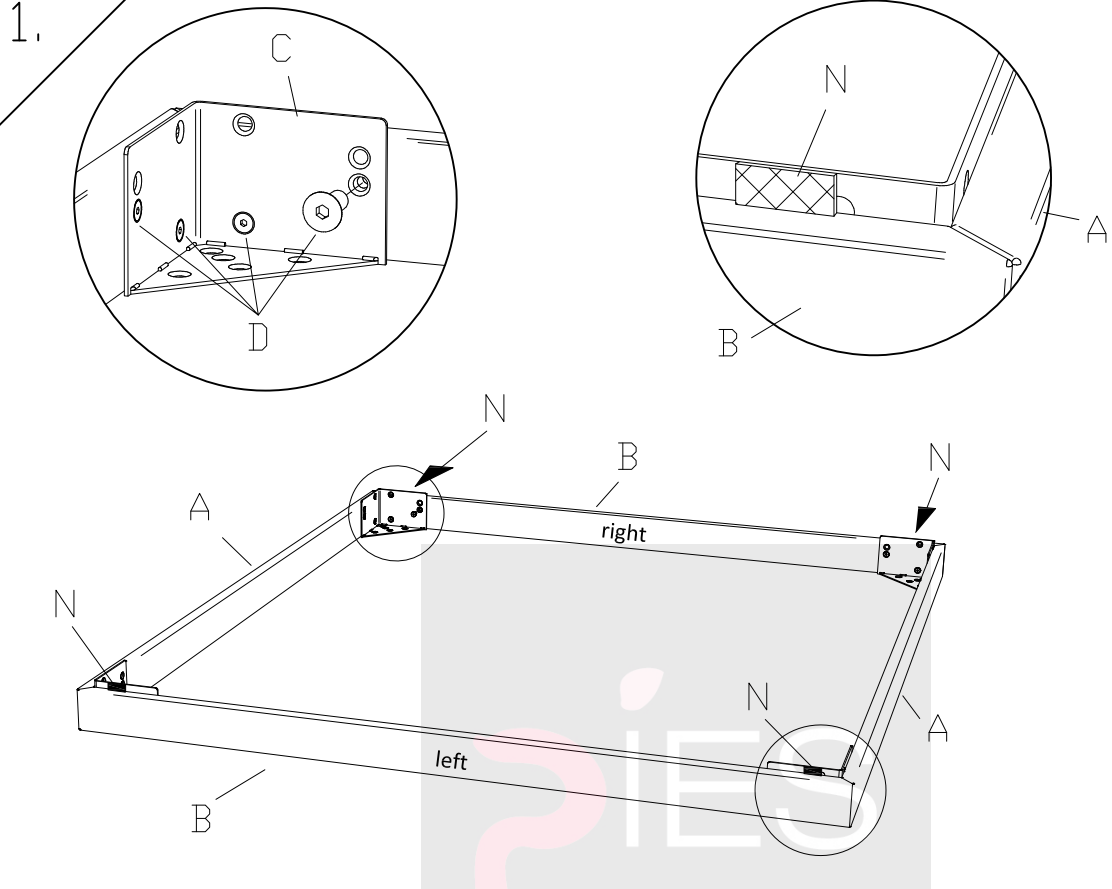


<p>N x4</p>  <p>630.50501</p>	<p>Z x1</p>  <p>631.101</p>
--	--

Option


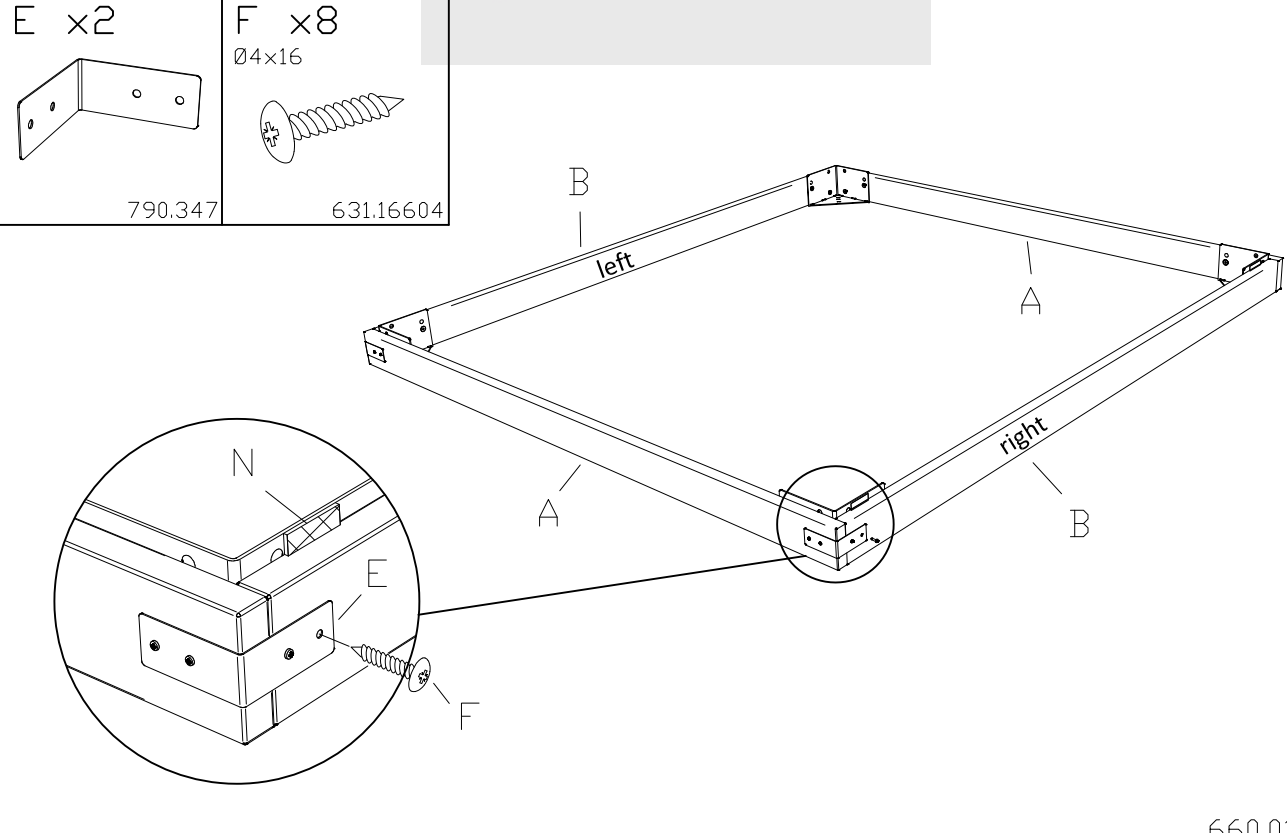


<p>E x2</p>  <p>790.347</p>	<p>F x8 Ø4x16</p>  <p>631.16604</p>
--	--




660.01183

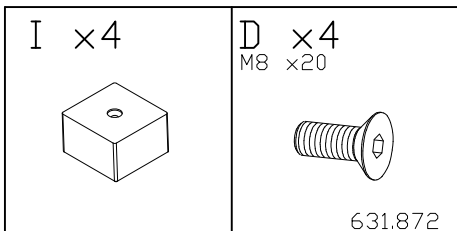



2.

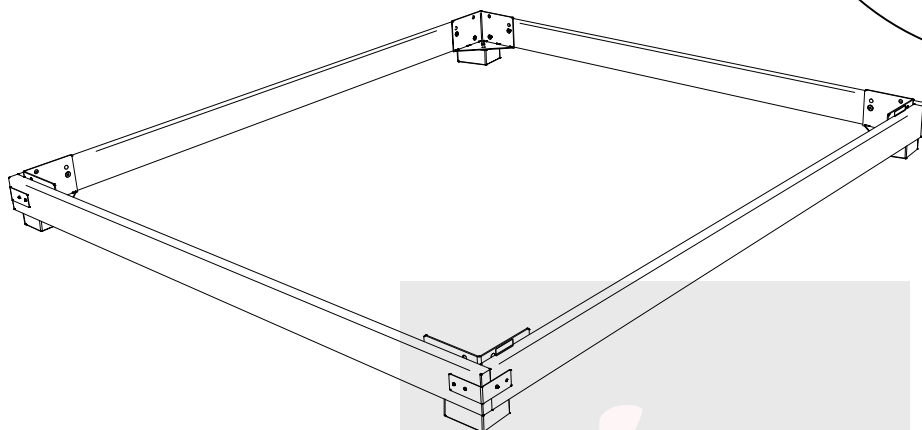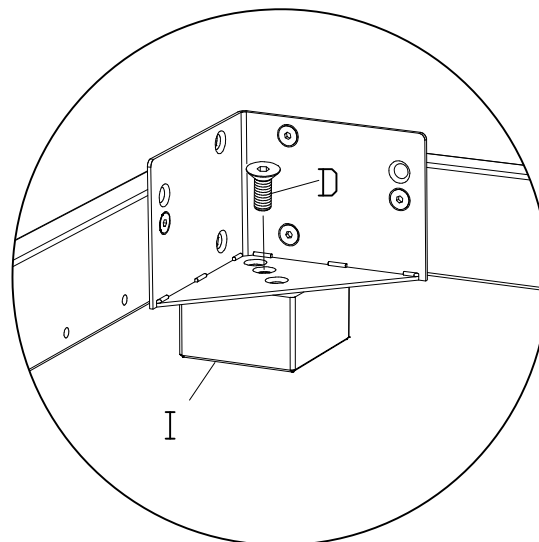

bei Breite 140cm
for width 140cm
pour la largeur 140cm
per misura 140cm

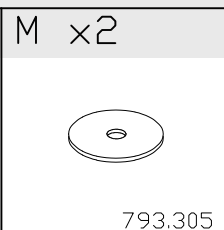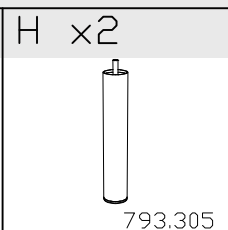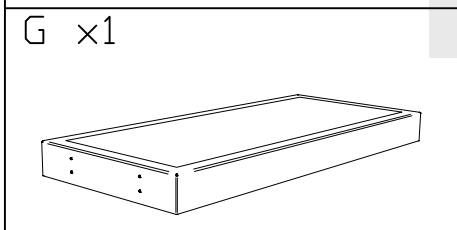


3a

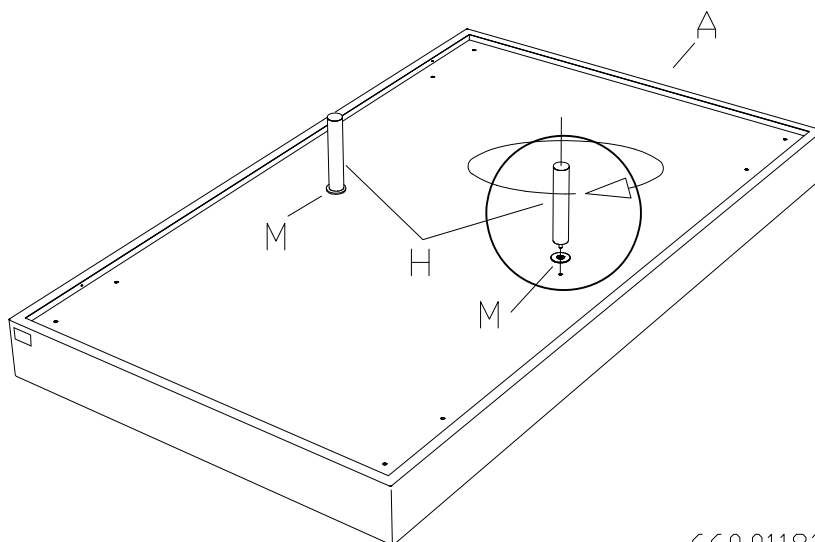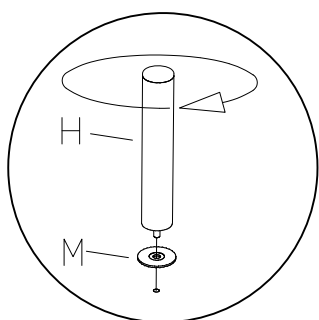

660.01183

bei Breiten 140-200cm
 for widths 140-200cm
 pour la largeur 140-200cm
 per misura 140-200cm

G x2

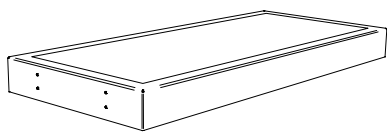


H x6




793.305

J x1



630.779


K x1

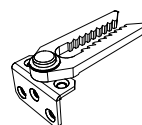

630.779

L x6

Ø4x20




631.303

3b


M x6




793.305









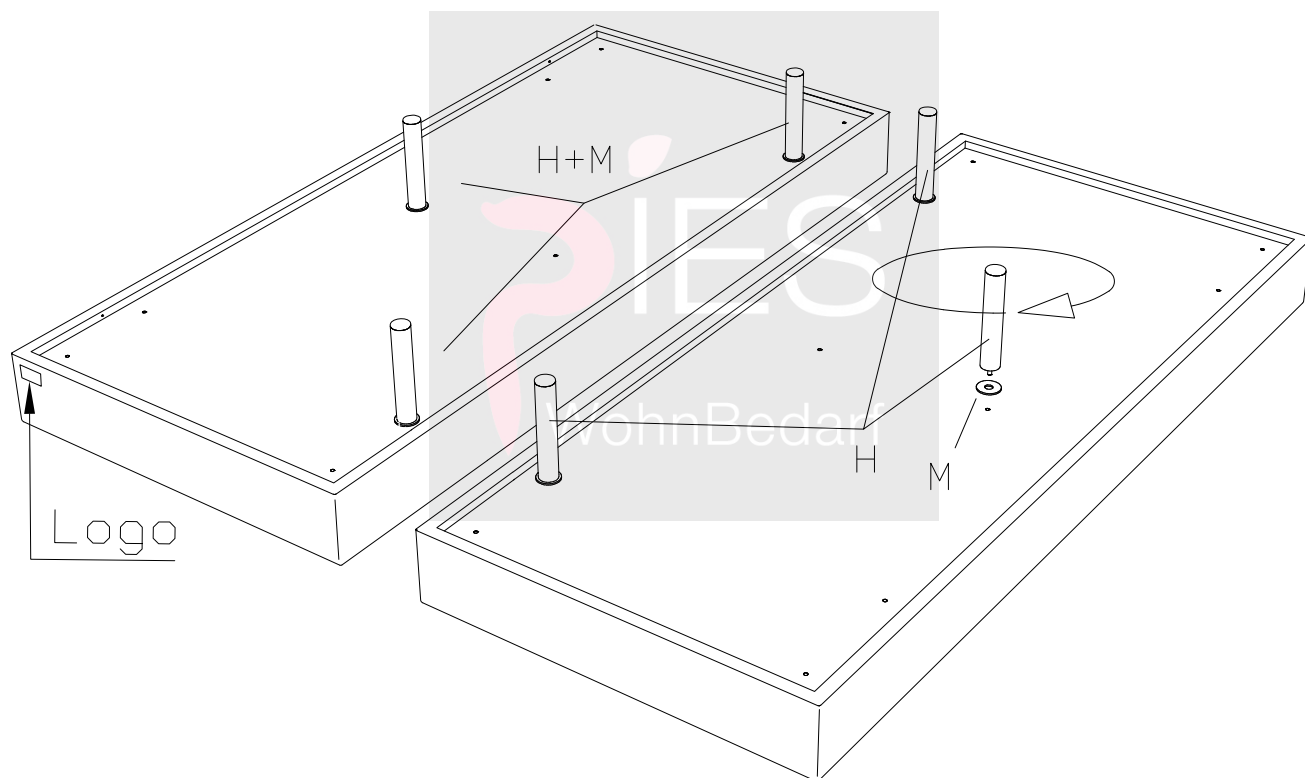




4.

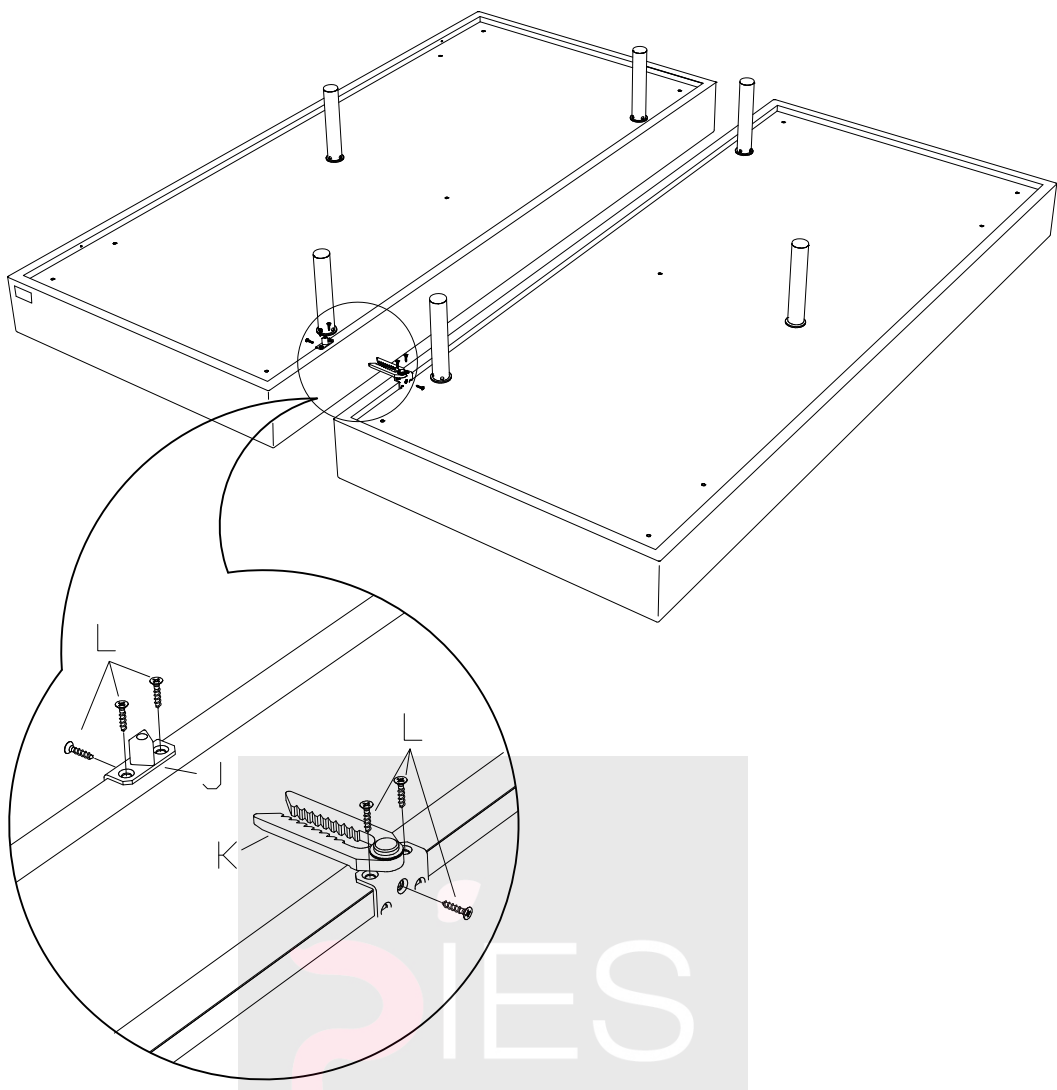



5.

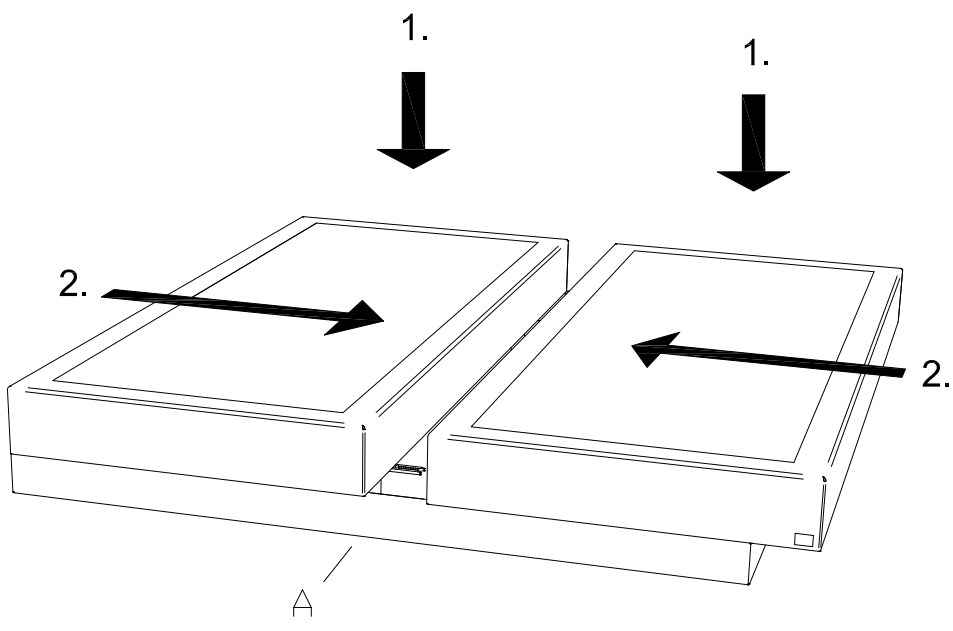

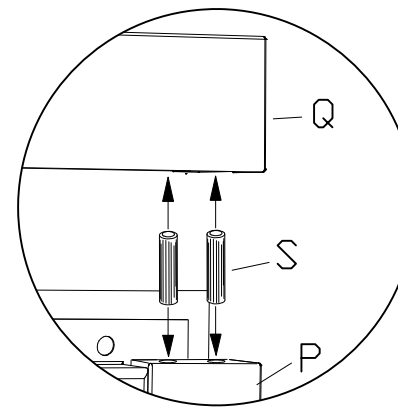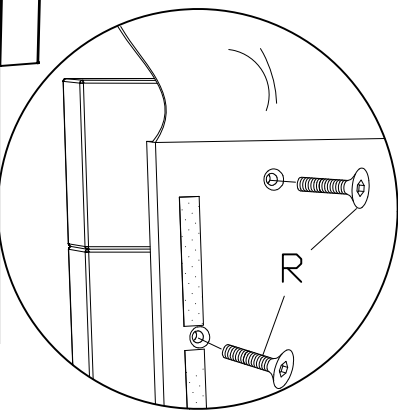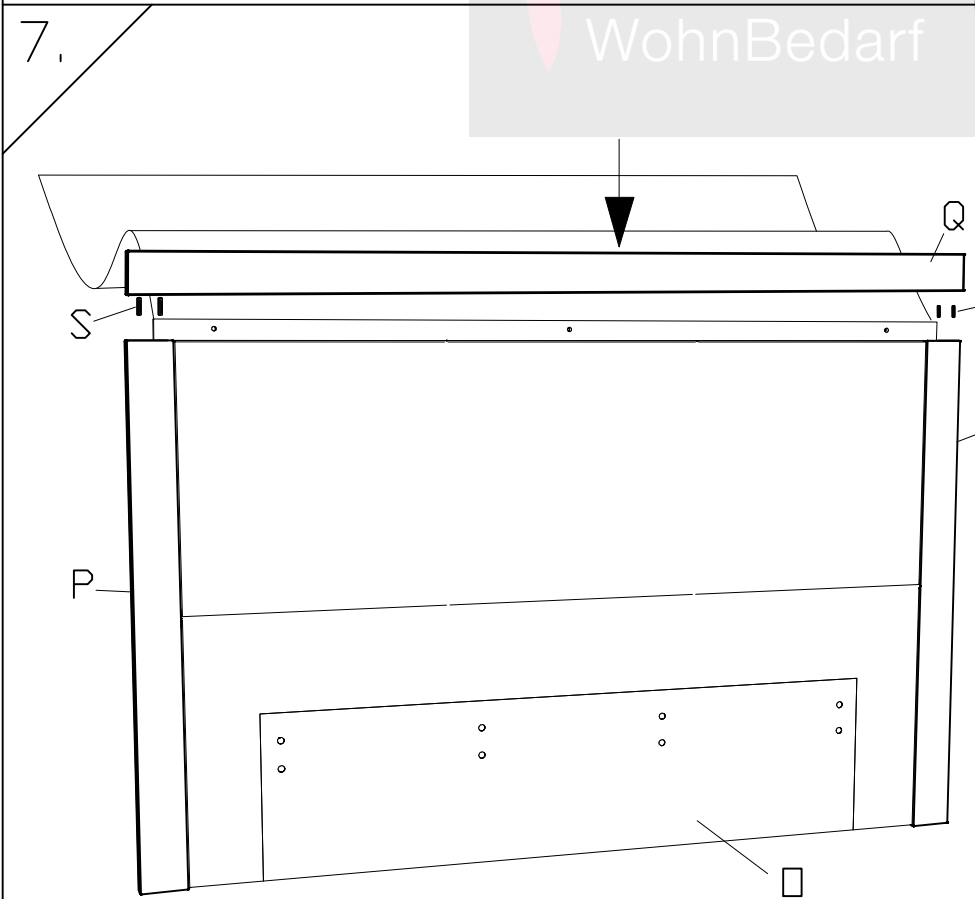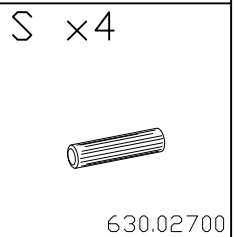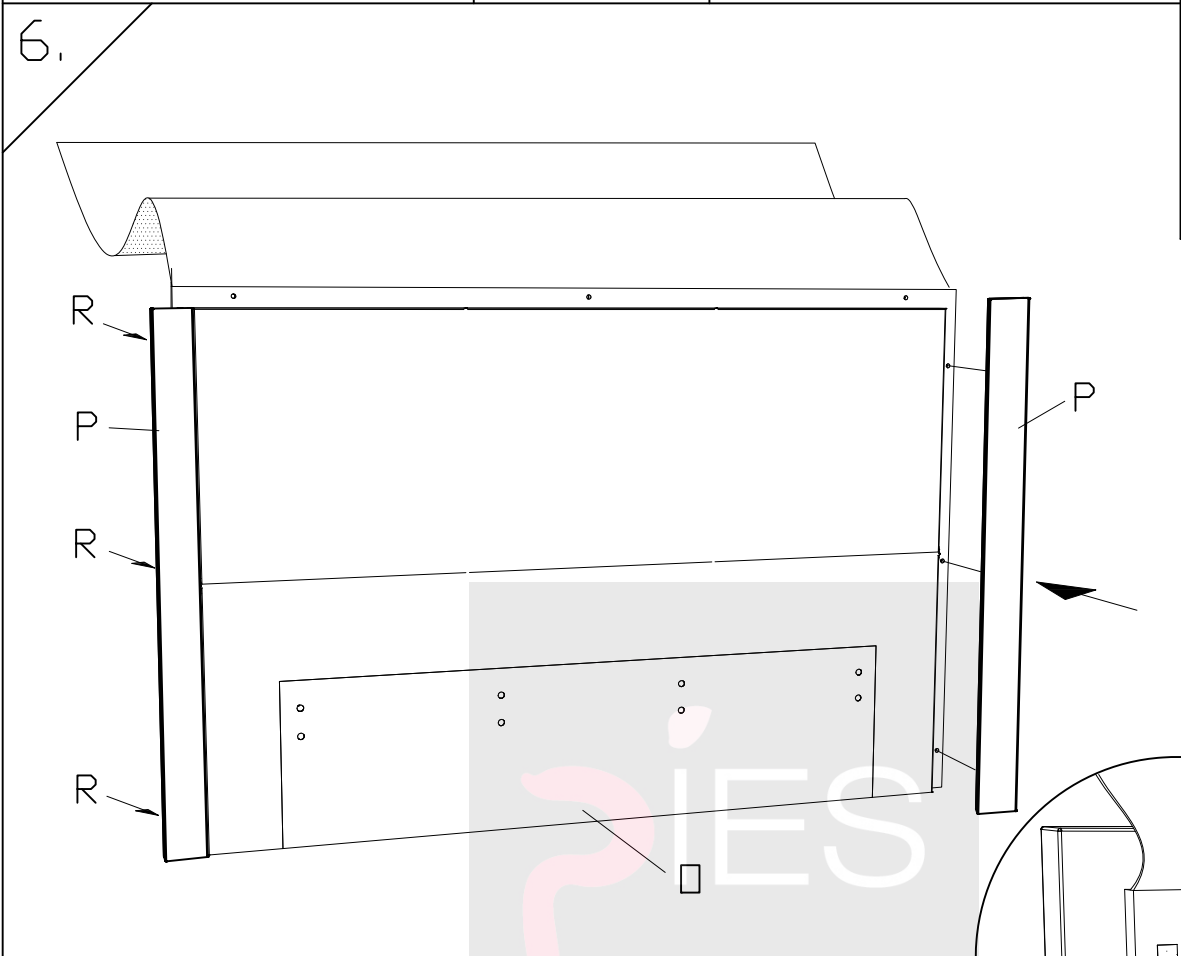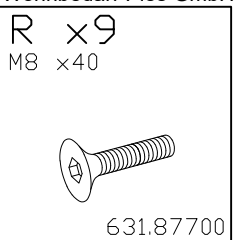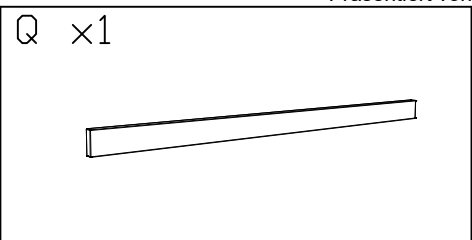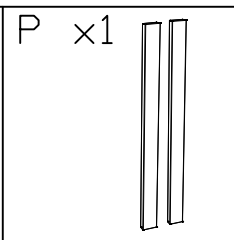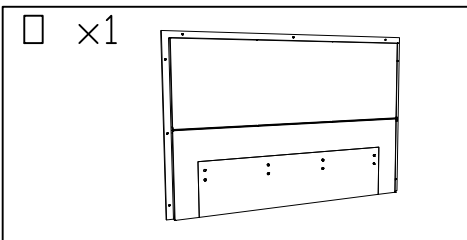

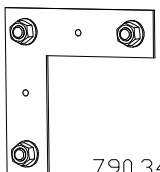T x2  790.348	F x4 Ø4x16  631.16604
---	--

8.

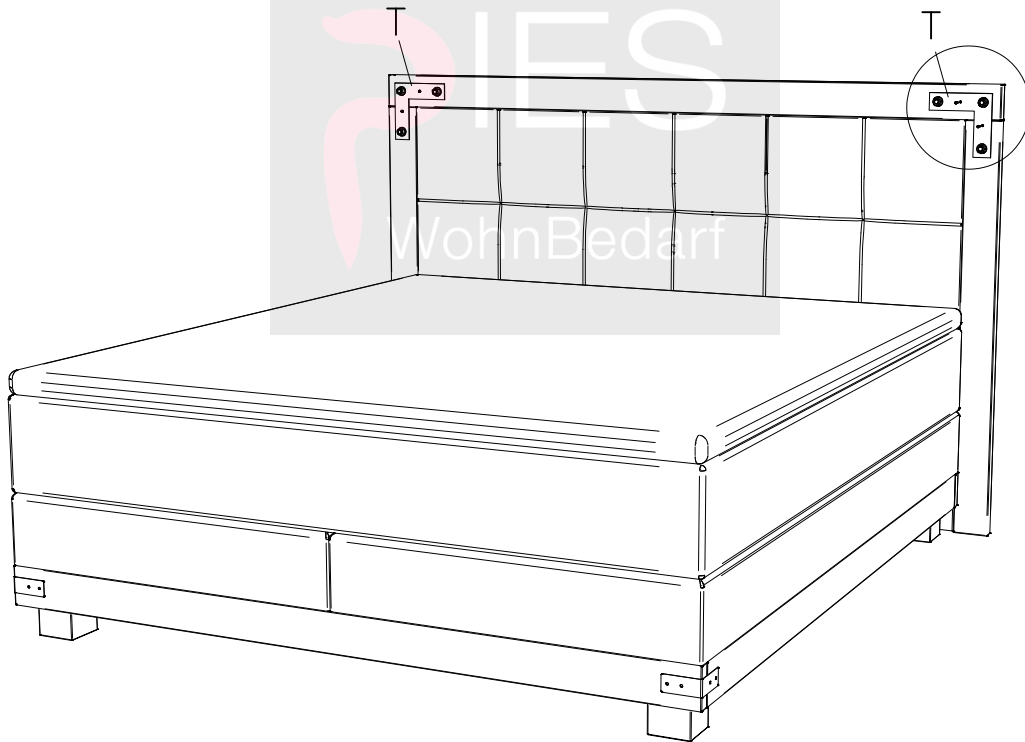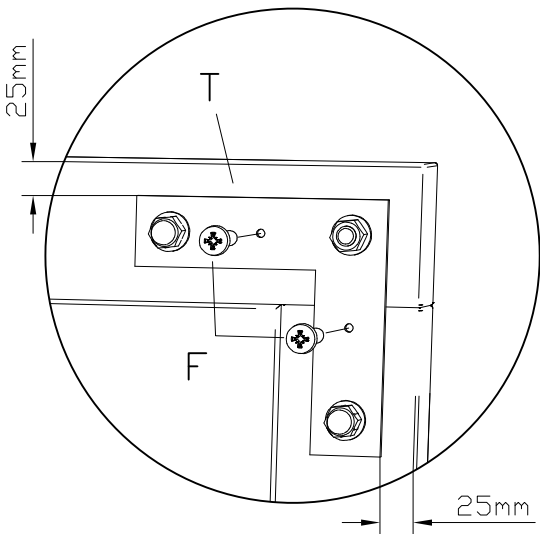

1 sektorig / 1 sector / 1 secteur / 1 settore

U x4




631.887

V x4






631.012

Z x1





631.100

9.

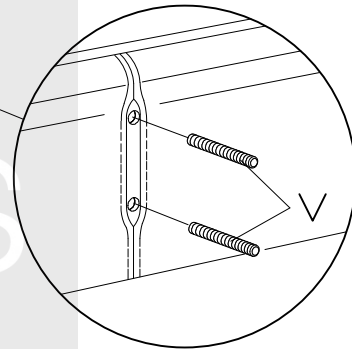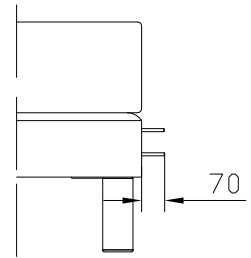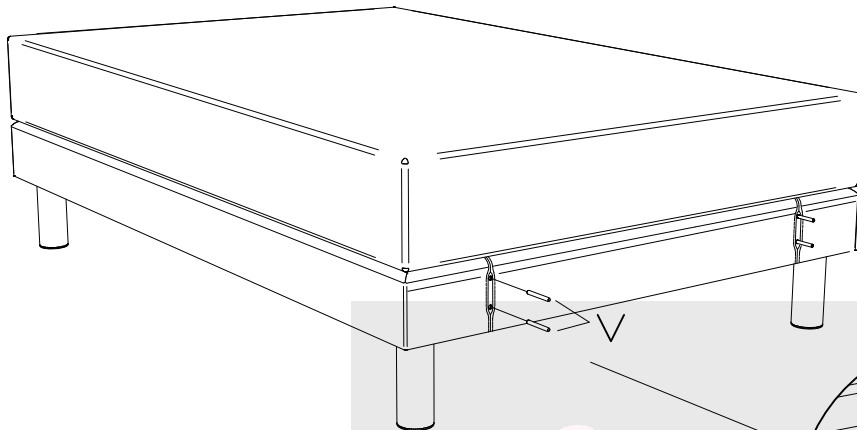

10.

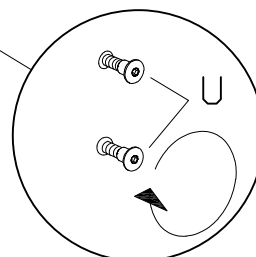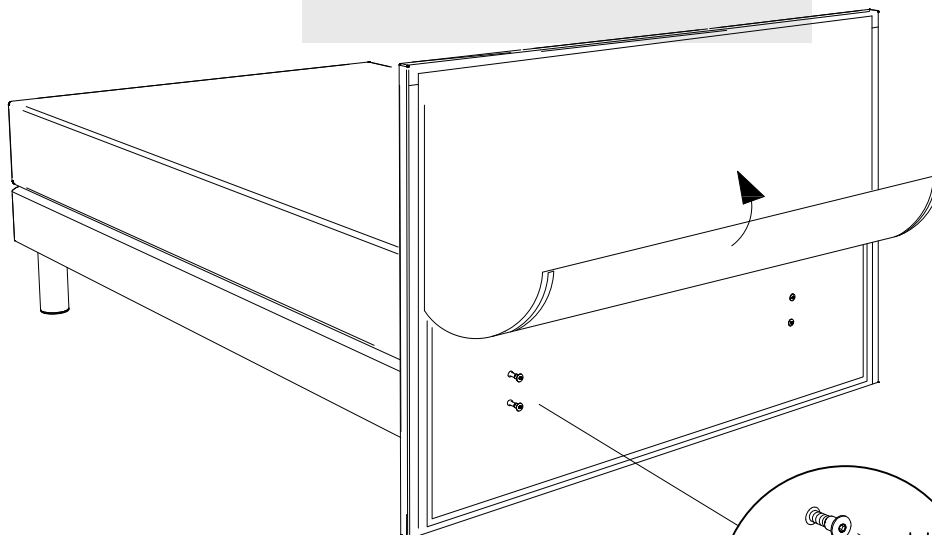

660.01183

2 sektorig / 2 sector / 2 secteur / 2 settore

U x8




631.887

V x8






631.012

Z x1





631.100

11.

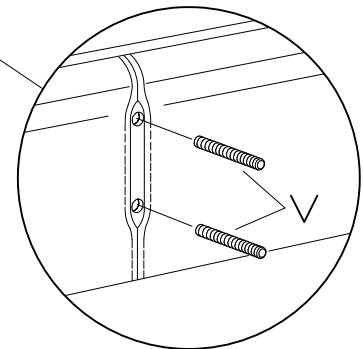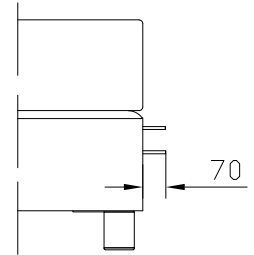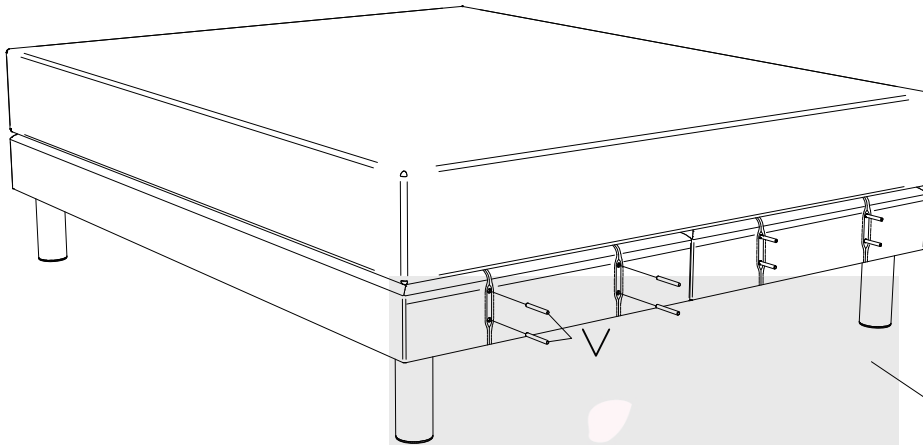

12.

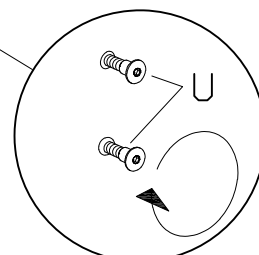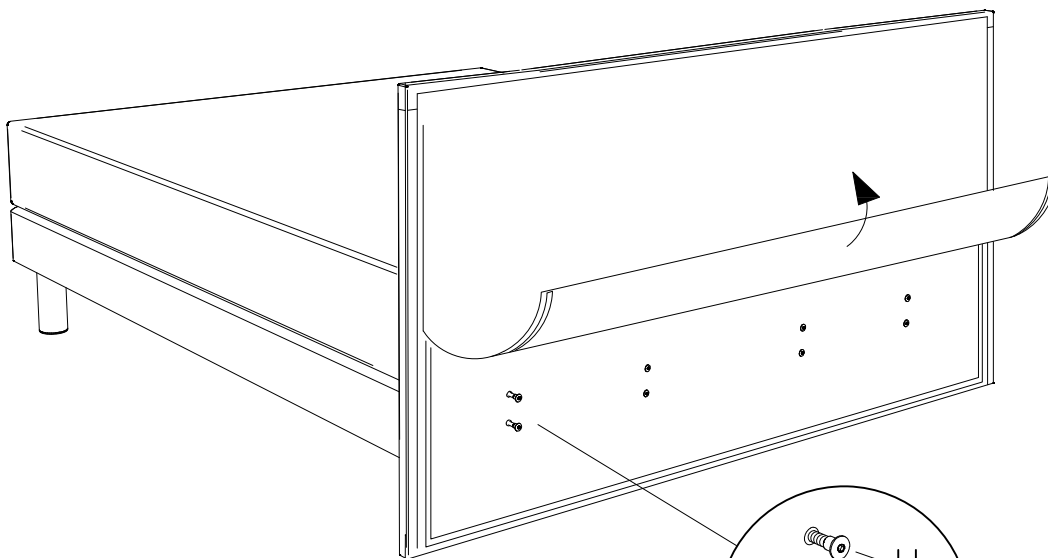

660.01183