






MONTAGEANLEITUNG  
NOTICE DE MONTAGE  
ASSEMBLY INSTRUCTION  
ISTRUZIONE DI MONTAGGIO

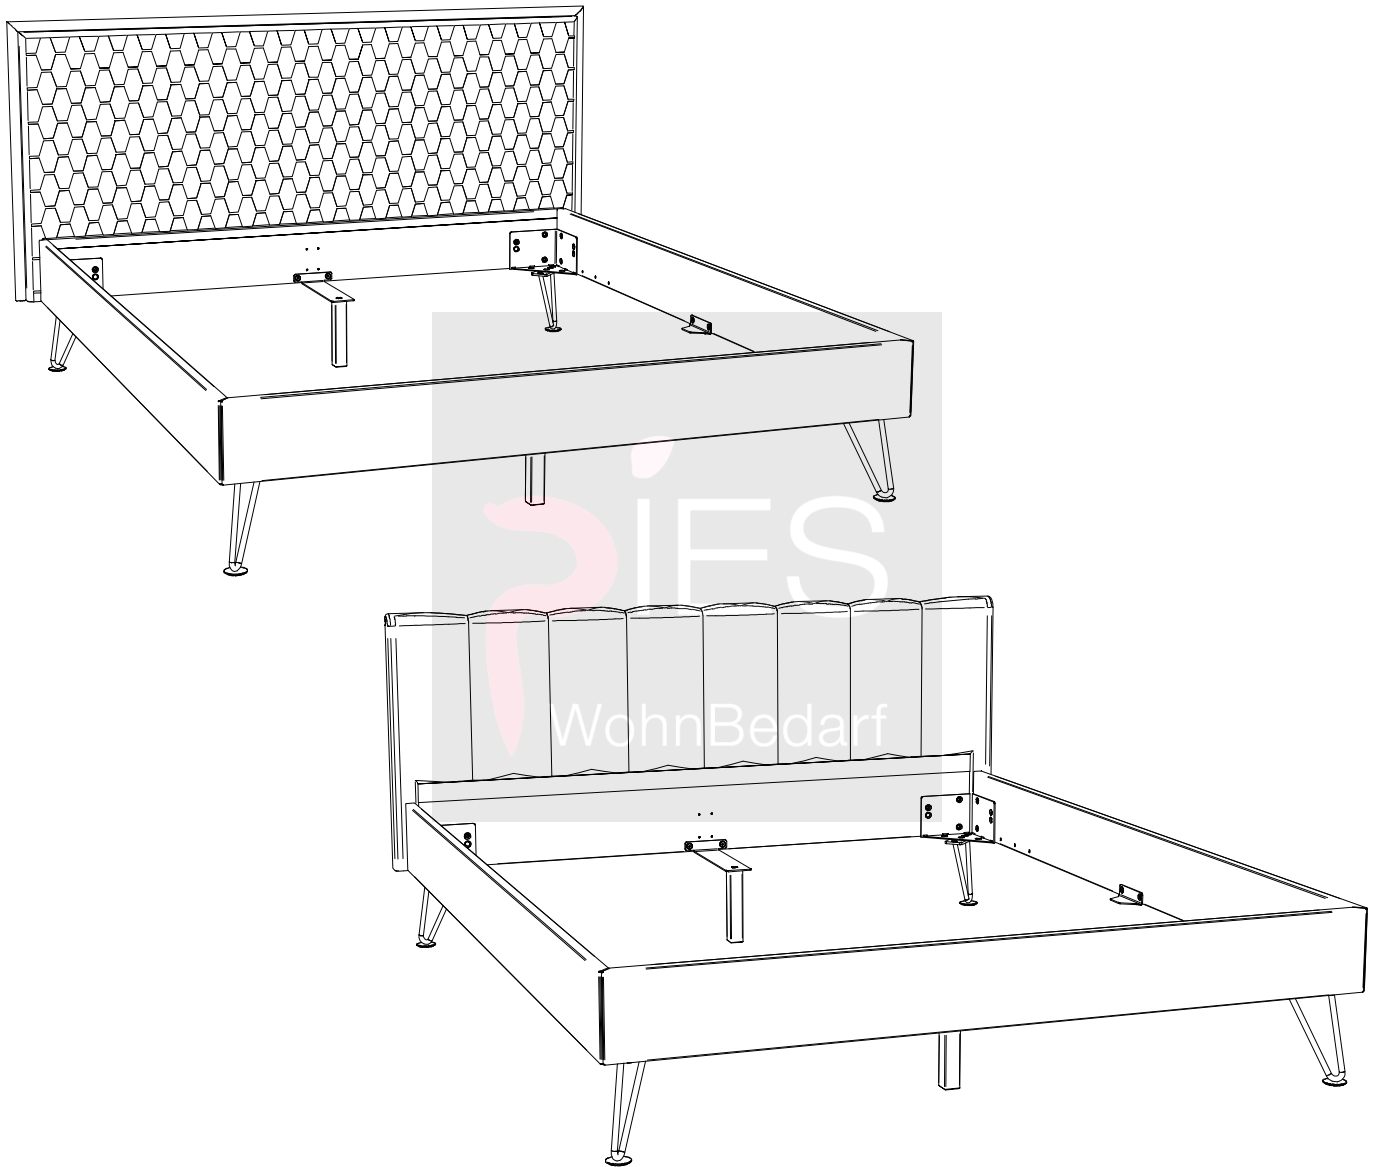

# Sara & Roberto



Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

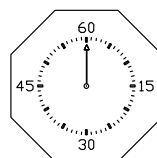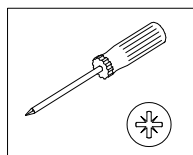

22.08.2023

660.01337

A x1  
749.713

B x1  
749.712

C x1  
749.366-.368

D x1




E x4  
630.101

F x28  
631.872



G x2  
630.099

Z x1  
631.10000


1.

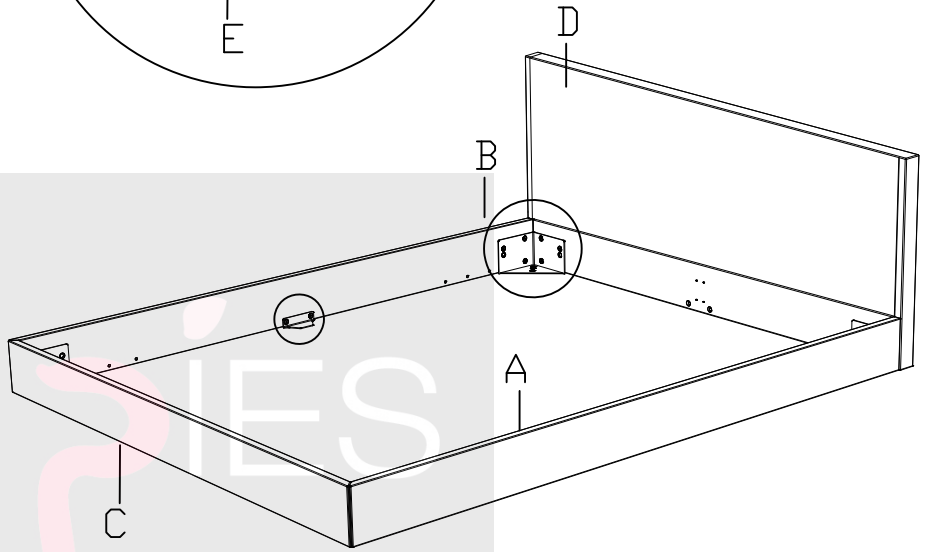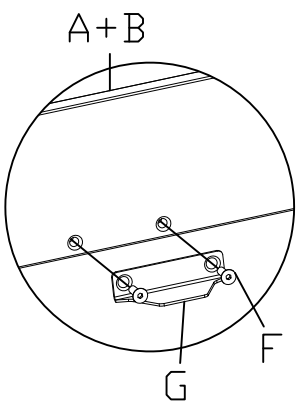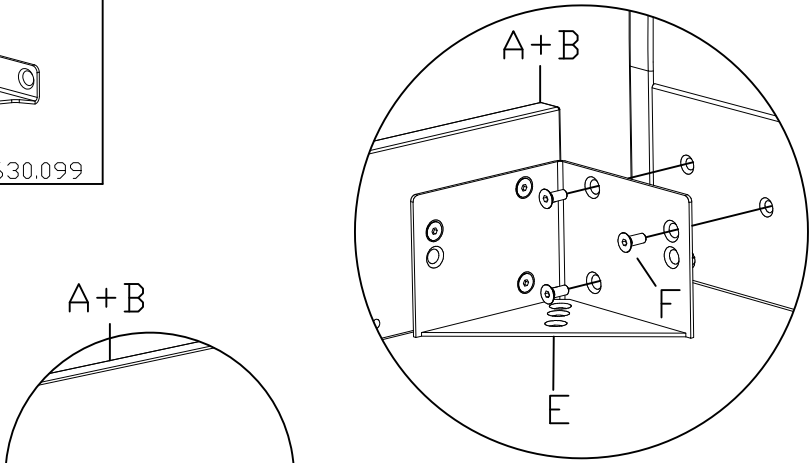

2.

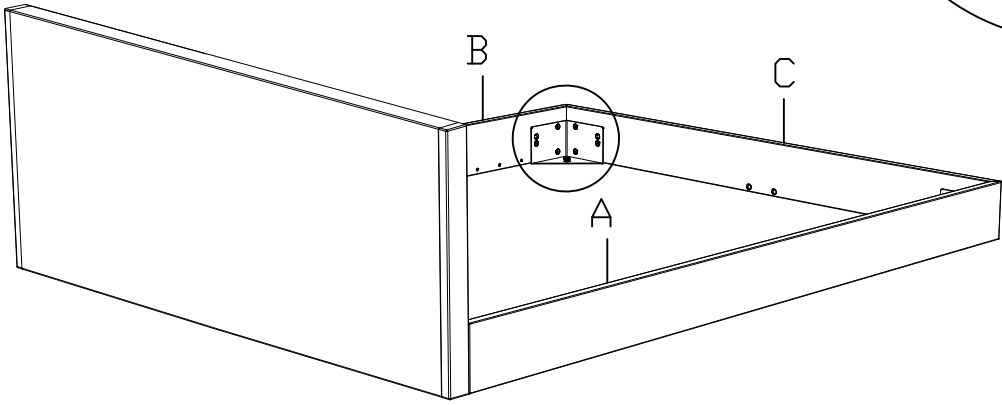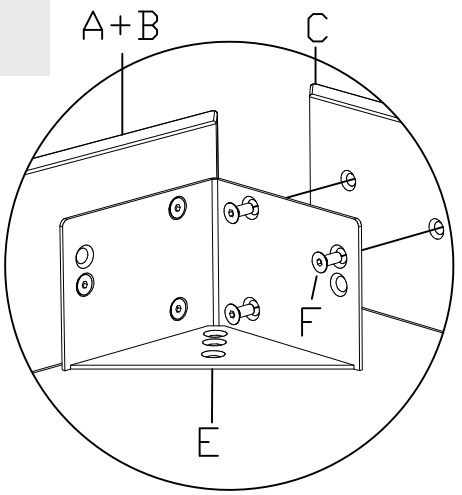

H x4




I x8  
M8x16





631.876

Z x1




631.100

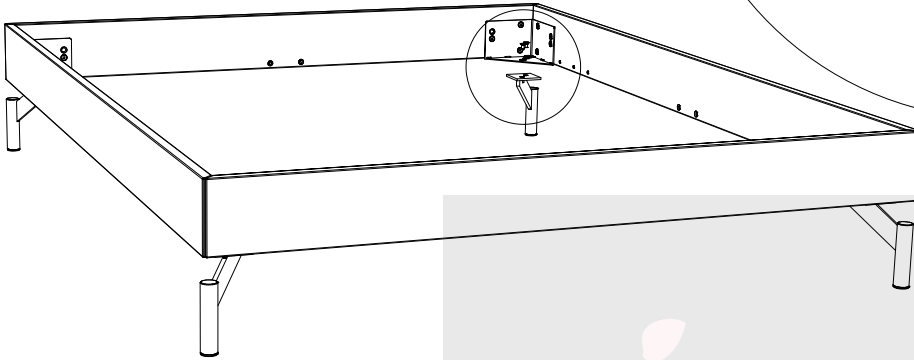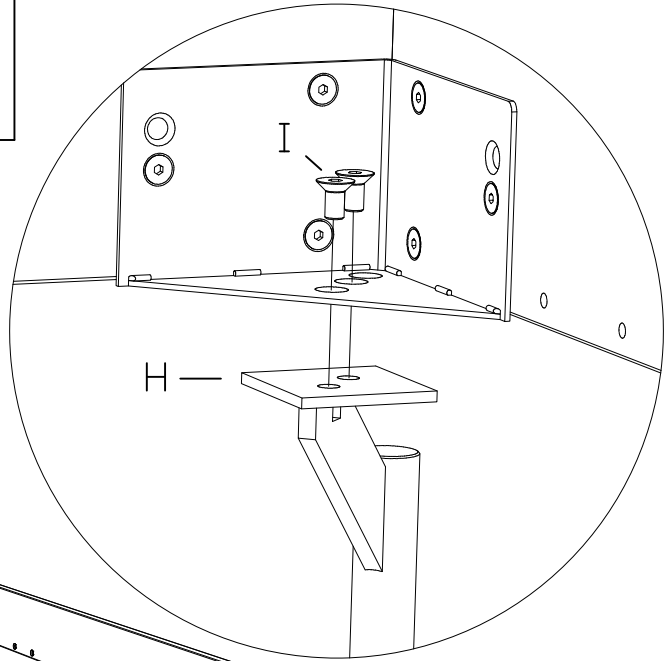


zusätzlich bei Breiten ab 160cm, Fushöhe 20  
 additional for widths from 160cm, foot height 20  
 à partir des dimensions 160cm, Hauteur du pied 20  
 a partire della misura 160cm, Altezza del piede 20

L x2




790.023



M x2



F x6  
M8x20



631.872

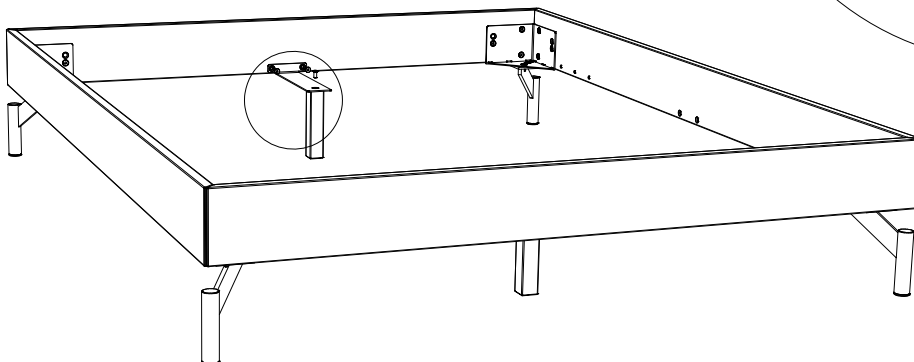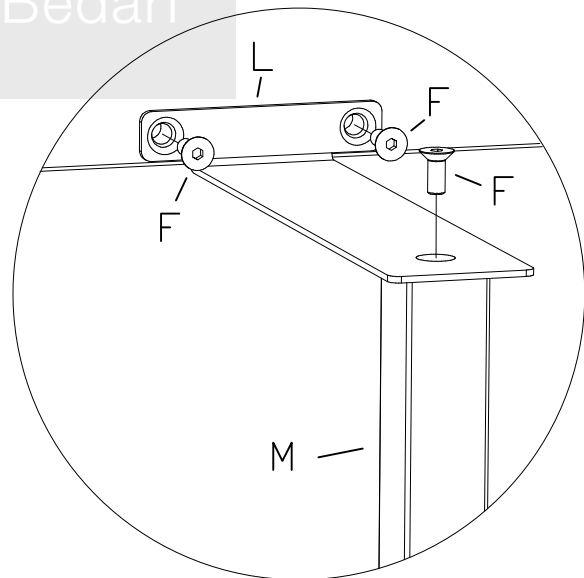

660.01337